



**INSTALLATION AND  
OPERATING INSTRUCTIONS FOR  
WALL MOUNT UNITS  
WM-38, WM-58, WM-36 & WM-62**

**INSTALLER: LEAVE THIS MANUAL WITH THE APPLIANCE. CONSUMER:  
RETAIN THIS MANUAL FOR FUTURE REFERENCE.**



## REFERENCE GUIDE

- I. Prior to installation, please ensure:
  1. Your socket-outlet is enough for your fireplace against both voltage and capacity.;
  2. The light bulbs in your firebox are in good condition. For checking this, please follow the instructions for replacing the light bulbs on section MAINTENANCE.
- II. The heater on your fireplace may emit a slight, harmless odor when first used. This odor is a normal condition caused by the initial heating of internal heater parts and will not occur again.
- III. If your heater does not emit heat, please ensure the Heater Switch is on. For further information, please consult section Operation of the Practical User's Guide.

## Marks

### NOTE

Procedures and techniques, that are considered important enough to emphasize.

### CAUTION

Procedures, which if not carefully followed, will result in damage to the equipment.


### WARNING

Procedures, which if not carefully followed, will expose the user to the risk of serious injury, illness or death.

# IMPORTANT INSTRUCTIONS

## WARNING

You should read and always follow the important instructions below to reduce the risk of fire, electric shock, and injury to persons.

1. Read all instructions before using this fireplace.
2. This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces, such as surfaces near the heater outlet or light bulbs. The air-outlet grilles become hot during heater operation. Keep combustible materials, such as clothes, pillows, furniture, bedding, papers and curtains at least 3 feet from the front of the unit. Do not cover or block air-outlet grilles or any ventilation or exhaust opening at any time.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Do not install the fireplace directly on carpet or a similar surface, which may restrict air circulation beneath the unit.
5. Always unplug fireplace when not in use.
6. To disconnect fireplace, turn controls to off, then remove plug from socket.
7. Do not use outdoors.
8. This fireplace is not intended for use in wet locations, such as bathrooms, laundry areas and similar indoor locations. Never locate fireplace where it may fall into water container.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. All electrical heaters have hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored or where the unit will be exposed to flammable vapors.
14. Do not modify this fireplace. Use it only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
15. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No.16 AWG minimum size and rated not less than 2000 watts.
16. Do not burn wood or other materials in this fireplace.
17. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
18. Do not strike fireplace glass.
19. Always use a certified electrician should new circuits or sockets be required.
20. Always use properly grounded, fused and polarized sockets.
21. The heater must not be located immediately below a socket-out.
22. Always disconnect power before performing any cleaning, maintenance or relocation of the fireplace.
23. When transporting or storing the fireplace and cord, keep in a dry place, free from excessive vibration and store so as to avoid damage.
24. **WARNING:** In order to avoid overheating, do not cover the heater. 
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
26. Children should be supervised to ensure that they do not play with the appliance.
27. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
28. Heater is to be installed so that switches and other controls cannot be touched by a person in the bath or shower.

# INSTALLATION

This section provides step-by-step instructions for installation of your fireplace.

## WARNING

The socket must be 15A/125V.

1. This fireplace is designed to be able to hang on solid walls or insert into a wall hole after proper construction. Select a suitable location, which is not susceptible to moisture, safe, dust free, away from high traffic and away from things may catch fire or block openings such as drapes, furniture, etc.
2. The fireplace must be installed at a suitable position where at least 50cm above the floor and no higher than 180cm.

## NOTE

It is a good idea to place your fireplace near an existing socket, for ease of electrical hook up.

3. There is 4 keyholes on the back side of the fireplace steel plate board, place the mantel in the desired location and drill 4 holes according to the position of the 4 keyholes. Then insert 4 expansion bolts. Use strong screws to fix it on the wall, each of the screw needs to come out of the wall for 8mm, ensure that the screw are well fixed then lift the fireplace and make the keyholes a little higher than the screw's position, then make the screws slide slowly into the keyholes until it take the whole weight of the fireplace.

Installation (bottom fig.1, fig.2 and fig.3)

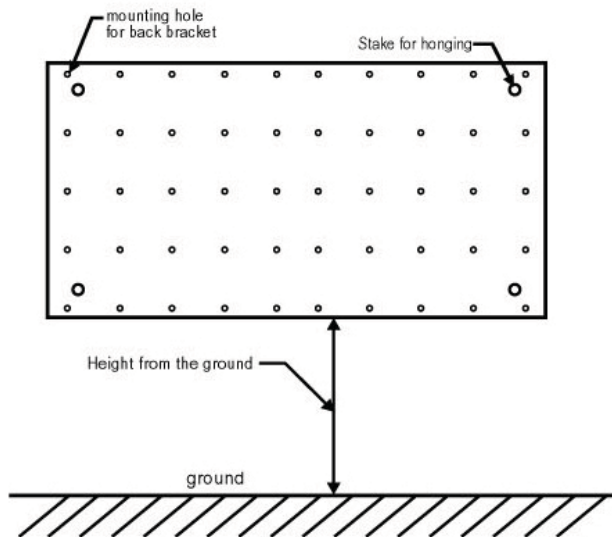 


Fig.1(back bracket for hanging)

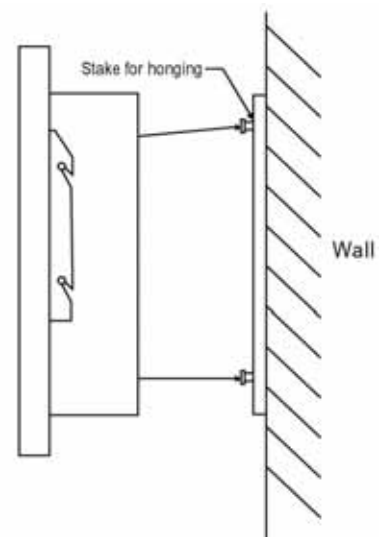 


Fig.2 (side view)

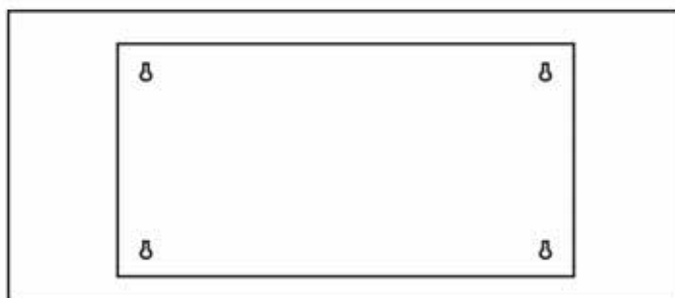 


Fig.3 (back view)

**CAUTION**

The fireplace need to be installed in a dry, safe and dustless place.

4. If there's no 15A/125V socket near the desired location, install a new one nearby.

**WARNING**

Do not attempt to wire you own new sockets or circuits. To reduce the risk of fire, electric shock or injury to persons, always use a licensed electrician.

5. Make sure the fireplace insert is switched off (refer to operation instruction section).
6. Plug the fireplace into a 15A/125V socket. Wiring the cord along the corner of wall.

# OPERATION

This section will explain the function of each convenient control.

## NOTE

The heater may emit a slight, harmless odor when first used. This odor is a normal condition caused by initial heating of internal heater parts and will not occur again.

## Control Panel Operation

### A. Buttons and indicators

There are four buttons on the remote controller, and four on the control panel of the fireplace, each pair of buttons with the same label perform the same function, the back of it is manual switch near the power cord:

<I/O> button is main power switch;


<ON/OFF> button is power switcher of the electric fireplace;


<DIMMER> button is used to adjust the brightness of simulated flame and logs;


<FLAME> button for the stepper motor speed control / on and stop status. ;


<HEAT> button turns the heater is working in low-power status and the heater is working in high-power status. If the heater already is, turn it off;

There are four indicators on the control panel:

 is the power indicator, it light up when the fireplace is working, and turned out when the fireplace is turned off;

 indicate the status of the simulated flame and logs. It's brighten up when the flame simulate component is working, and will be flashing when you adjusting the brightness of the flame;

 indicate click to start a beginning stepper motor speed control loop, and then stops at the current location;



 

 indicate the heater is working in low-power status and the heater is working in high- power status.

The red window on the control panel of fireplace is the eye of receiver, do not cover.








### B. Remote Operation

On the first usage of remote controller, install the batteries first: open the battery box by sliding its cover along the arrow, install two AAA batteries according to the marks in the box, and slide the cover to its original position. If no batteries installed or the batteries are failure, the remote controller will be unusable. To use the remote controller effectively, point it to the electric fireplace and keep a distance of 1-5 meters. There're four buttons marked the same as buttons on the remote controller, each pair of them perform the same function, choose as you favour.

1. Power control. Press the <ON/OFF> button, the electric fireplace will be powered on, and the  lamp will brighten up. The heater will not be turned on automatically when you power on the fireplace, please refer to paragraph 3. Note, all operations are valid only when the power is on, except to "turn the power on" operation. Press the <ON/OFF> button again, the fireplace will be powered off.
2. Adjust the brightness of simulated flame and logs. When the fireplace is powered on, flame is turned on automatically, and it is as bright as when the fireplace is powered off. Press <DIMMER> button to adjust the brightness, the  lamp will be flashing, and the brightness of the flame and logs will start and keep changing. When the brightness goes to the point you want, press <DIMMER> button again, and the brightness will keep still and the  lamp will keep brighten up.
3. Flame speed adjusted control. Is defined as the stepper motor speed control / on and stop. When the fireplace is powered on,  is brighten up, click <FLAME> to start a stepper motor speed control loop, from between 20-7s and then click



<FLAME> stop at the current location, adjusted speed the process of  blinking display (as dimmer lights flicker frequency ), do not adjust flame speed then the  is brighten up.

4. Press <HEAT> button, process of operations in accordance with LOW-HIGH-OFF-LOW ... .. status, between the cycle of low-power to high-power and then off. Press one <HEAT> button, when  micro-light is on low-power status. Another press <HEAT> button, when  full-time bright is on high-power status. Then press <HEAT> button, when  dark the heater is power off.
- Note, before the heater emits heat or after it stop producing heat, the hot air outlet may output air for 10 seconds. This is designed for protect circuit, and it's not spoiled.
5. Power off the electric fireplace when you leave it for a long time.
6. The two alkaline batteries must be removed from the appliance before it is scrapped.
7. The alkaline battery is to be disposed of safely.

# MAINTENANCE

## WARNING

Disconnect power before attempting any maintenance or cleaning to reduce the risk of fire, electric shock to persons or damage.

## Light Bulb Replacement

Light bulbs need to be replaced when you notice a dark section of the flame or when the clarity and detail of the log exterior disappears. There are three (WM-58 is five ) bulbs under the log set. Such replacement must be conducted by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## WARNING

Allow at least 5 minutes for light bulbs to cool off before touching bulbs to avoid burning of skin.

### I. Bulb Requirements

 
Quantity of 3 clear chandelier or candelabra bulbs with an E-12 small socket base, rating voltage 125 volts, rating power 40 watts.

## CAUTION


Do not exceed 40 watts per bulb

### II. Operation

1. Unpick the glass faceplate , disassemble glass faceplate from D1 four point . please see below figure

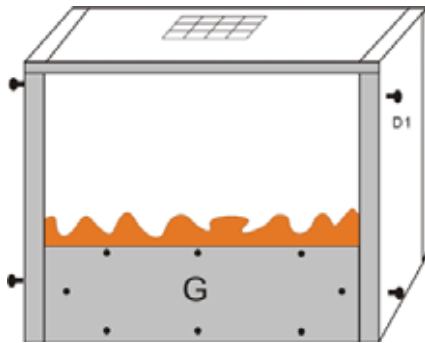

 2. Open the light bulb area :  
The light bulb area is at the front of electric fireplace, see "G" .there are 8 screws (BG-100 is 12 screws ) on it.loosen the screw by some tool, then you can open it. (Under figure)
3. Examine the bulbs to determine which bulbs require replacement.
4. Remove old bulb and replace a new one. Hold the socket while unscrewing or screwing bulbs. (Right figure)
5. Replace the cover of light bulbs.
6. Done.

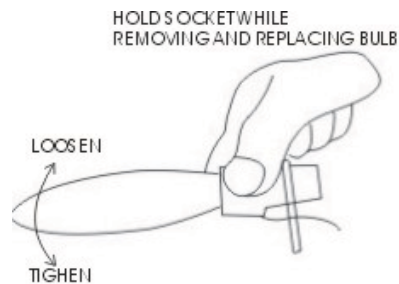



## WARRANTY

Amantii Imports Corp. ("Amantii") warrants that your newly purchased Amantii electric fireplace is free from manufacturing and material defects for a period of one (1) year from the date of the first purchase, subject to the conditions and limitations contained below.

### Warranty Application & Exclusions

This limited warranty applies to your newly purchased Amantii electric fireplace; the limited warranty's application is limited to purchases made in any province of Canada or in any of the 52 States of the United States of America, including the District of Columbia. Only the original purchaser of the product is eligible for coverage under this limited warranty; the warranty is not transferable.

Light bulbs are not covered by this limited warranty and are the sole responsibility of the owner/purchaser.

### Warranty Coverage and Term

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Amantii warrants such products to be free from defects in material and workmanship for a period of one (1) year from the date of the first purchase of such products.

The limited one (1) year warranty period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties—expressed or implied—with respect to the product, its components and accessories or any obligation/liabilities on the part of Amantii are hereby expressly excluded.

### Limitations to Coverage Under Limited Warranty

This limited warranty does not apply to products that have been repaired, except by Amantii or its authorized service representatives, or otherwise altered. This limited warranty further does not apply to defects resulting from misuse, abuse, accident, neglect, incorrect installation, improper maintenance or handling, or operation with an incorrect power source.

Products made by other manufacturers, sold with the product or thereafter, are not covered by this limited warranty. The use of unauthorized components will render this warranty null and void.

### Service Under Limited Warranty

Defects must be brought to the attention of Amantii Technical Service by contacting Amantii at (1-888-406-8764), or at 1503 – 7088 18th Avenue, Burnaby, British Columbia, Canada, V3N 0A2. Please have your proof of purchase, catalogue/model and serial numbers available when calling; any and all service under the limited warranty requires a proof of purchase of the product.

### Defects

Should a product or part covered by this limited warranty be proven to be defective, in material or workmanship, and during the one (1) year limited warranty period, Amantii will replace such defective product or part without charge. If Amantii is unable to replace such product, or if replacement is not commercially practicable or cannot be timely done, in its sole discretion Amantii may, in lieu of replacement, choose to refund the purchase price for such product or part.

### Limitations

In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable to the purchaser or any third party, whether in contract, in tort, or on any other basis for any indirect, special, punitive, exemplary, consequential, or incidental loss, cost or damage arising out of or in connection with the sale, maintenance, use or inability to use the product, even if Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, have been advised of the possibility of such losses, costs or damages, or if such losses, costs or damages are foreseeable. In no event will Amantii, including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, be liable for any direct losses, costs or damages that exceed the purchase price of the product.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the purchaser.

### Application of Provincial and State Law

This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sale of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

### General

Amantii reserves the right to make changes at any time without notice, in design, material, specifications, prices and the right to discontinue styles and products.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



[www.amantii.com](http://www.amantii.com)

Date of Purchase:

Dealer Information: