


ROYALL

PRODUCED BY ARK ALLOY LLC

**INDOOR
FORCED AIR
SOLID FUEL FURNACE**

325 South Park Street, Reedsburg Wisconsin 53959 phone 608-768-8508

MODELS - 8095, 8130, 8130HD

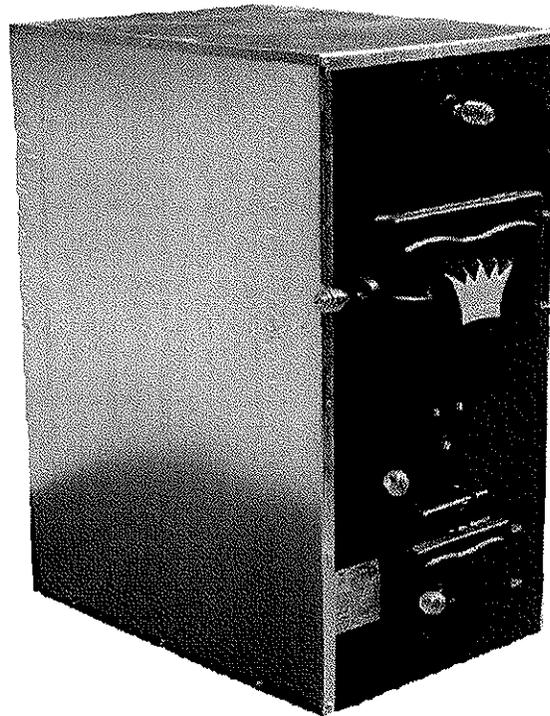

Installation and Operation Manual

(SAVE THESE INSTRUCTIONS)

VERIFY WITH INSURANCE COMPANY AND CHECK ALL LOCAL CODES AND ORDINANCES PRIOR TO PURCHASE OR INSTALLATION. IT IS THE OWNER'S RESPONSIBILITY TO ENSURE THAT THE APPLIANCE IS ACCEPTABLE TO THEIR INSURANCE CARRIER AND THAT THE APPLIANCE MEETS ALL LOCAL CODES AND ORDINANCES

Thank you for purchasing the **ROYALL** Indoor Solid Fuel Appliance.

The **ROYALL** is a quality Indoor Solid Fuel Appliance designed to effectively heat structures. Please read and follow all safety instructions to ensure optimal performance.

The installation and operation of the **ROYALL** is quite simple. Nevertheless, we recommend that the instructions be carefully read and followed. Pay particular attention to the chimney and chimney connector installation as they present the greatest fire danger.

If you have any questions on the installation or operation of your Indoor Solid Fuel Appliance, please contact your local **ROYALL** representative.

OBSERVE AND FOLLOW ALL SAFETY INSTRUCTIONS

Failure to install properly or follow safety instructions could result in severe personal injury, death or substantial property damage.

Hazard definitions

The following defined terms are used throughout this manual to bring attention to the presence of hazards of various risk levels or to important information concerning the life of the product.

DANGER	Indicates presence of hazards that <u>will cause severe</u> personal injury, death or substantial property damage.
WARNING	Indicates presence of hazards that <u>can cause severe</u> personal injury, death or substantial property damage.
CAUTION	Indicates presence of hazards that <u>will or can cause minor</u> personal injury or property damage.
NOTICE	Indicates special instructions on installation, operation or maintenance that are important but not related to personal injury or property damage.

Owner's registration card must be completed and returned to ROYALL for warranty to be in effect.

SAVE THESE INSTRUCTIONS

Please fill in the following blanks and have this manual available when you call your local ROYALL representative for assistance.

Model # _____

Serial # _____

Date of Purchase _____

Date of Installation _____

Dealer Name _____

Dealer Phone # _____

CONTENTS

1. GENERAL	
Safety	4
Specifications	5
Product Description	6
2. INSTALLATION	
Placement	7
Clearances	8
Contents	9
Firebrick Installation	10
Shroud Installation	11
Installation with an Existing Furnace (Series).....	12
Filter Box.....	13
Installation with an Existing Furnace (Parallel).....	14
Venting Assembly.....	16
Component Assembly.....	18
Electrical Installation	19
3. OPERATION	
Lighting the Initial Fire.....	23
Setting the Fan Limit Control.....	24
Setting the Draft Damper.....	24
Burning Wood.....	25
Burning Coal.....	26
Operation.....	27
Emergency Actions.....	28
Maintenance	29
5. TROUBLESHOOTING	31
6. REPAIR PARTS	34
7. WARRANTY	40

SAFETY

ALL STATE or LOCAL CODES take precedence and MUST be observed

Note: These models have been constructed along U L391-99 parameters. Many of the recommendations in this manual are also based on the National Fire Protection Association Code 211. Before installing or starting operation, read and familiarize yourself with all instructions. Installation is to be performed only by qualified heating professionals.

DANGER - RISK OF EXPLOSION OR PERSONAL INJURY WHEN FUEL DOOR OR ASH DOOR ARE OPENED:

- Ensure that blower is 'OFF' prior to opening FUEL door or ASH door. Failure to do so could result in severe burns.
- ALWAYS hesitate momentarily between the first and second latches when opening doors to allow unburned gases to ignite. Failure to do so could result in severe burns.
- DO NOT use chemicals, kerosene or other flammable liquids to start a fire; severe burns could result.
- DO NOT store combustible liquids or materials near the appliance.
- DO NOT store wood within the minimum clearance to combustibles.
- DO NOT burn gasoline, naphtha or engine oil.
- DO NOT burn garbage, tires, telephone poles, railroad ties or yard waste. In many areas this is illegal and will damage the appliance. Burning anything other than approved fuels will void any warranties.
- DO NOT start a fire if flammable vapors or dust are present. An explosion could result.
- DO NOT install in garage where fuels are stored.

MAINTENANCE:

To avoid electric shock, disconnect electrical supply before performing maintenance. To avoid severe burns, allow the appliance to cool before performing maintenance.

APPLIANCE OPERATION:

- DO NOT block flow of combustion or ventilation air to the appliance.
- DO NOT restrict access to the rear of the unit for maintenance.

This appliance requires electricity whenever in operation. Operation without electricity could result in the appliance overheating. If power outages are anticipated, a back-up electrical generator is recommended

PRODUCT SPECIFICATIONS

MODEL	8095	8150
Height (Inches)	38" 48"	
Length	32" 34"	
Width	22" 24"	
Fire Box Volume	5.6 cubic Ft	7.4 cubic Ft
Log Length	25" 25"	
Door Opening	10" x 14"	10" x 14"
Flue Size	8" 8"	
Weight (Pounds)	475 lbs	595 lbs
Rated Output (Btu/Hr)	95,000 150,000	
Sustained Output (Btu/Hr)	50,000 100,000	

Note: Output values are based on theoretical 12 hour sustained burn rate under optimal conditions and are provided as guideline only. Actual output will depend on a variety of factors beyond the manufacturer's control including: furnace location, wood species, wood moisture, wood size, ash management and combustion air temperature.

PRODUCT DESCRIPTION

The ROYALL Indoor Solid Fuel Furnace is designed to burn either seasoned, split cordwood or coal. It is to be installed inside the building that it is heating.

The furnace can be installed as a stand-alone unit or can tie into an existing gas, oil or electric furnace System. If tying into an existing system, the solid fuel furnace can be installed either in series or in parallel with the existing furnace.

When installed in parallel with the existing furnace, a new cold air return duct is routed to a circulation blower that is attached to the back of the solid fuel furnace. The hot air duct out of the solid fuel furnace attaches to the hot air duct above the existing furnace. A pair of back draft dampers are required at the hot air outlet of each furnace. Each furnace is controlled by a separate thermostat.

When installed in series with an existing furnace, the cold air flows first through the existing furnace and then through the solid fuel furnace. This application does not require a second circulation blower, but does require that the existing furnace be a counter flow design. Each furnace is controlled by a separate thermostat.

The combustion process is driven by a draft blower mounted on the front of the appliance. When the room thermostat calls for heat, the draft blower starts adding combustion air to increase the fire intensity. If the exiting air temperature exceeds 200° F, the draft blower shuts down to prevent overheating. A manual damper on the draft blower balances the draft rate and a solenoid/flapper assembly on the blower ensures positive shutdown.

The circulation blower is controlled by an fan limit control that senses the exiting air temperature. The control starts the circulation blower when air temperature is above 170° F. The circulation blower moves heated air through the duct work and registers. If the air temperature falls below 130° F, the control turns the circulation blower off. The blower will turn back on once air temperature rises back above 170° F.

A MASTER switch on the control panel interrupts power to the furnace.

A FAN switch on the control panel interrupts power to the draft blower reducing the fire prior to opening the loading door.

A safety latch on both the loading door and the ash door allow unburned gases to combust prior to opening the door. Always pause between the first latch and the safety latch to minimize flare backs.

INSTALLATION: PLACEMENT

NOTE

CHECK WITH INSURANCE COMPANY PRIOR TO INSTALLATION. IT IS THE OWNER'S RESPONSIBILITY TO ENSURE THAT THE APPLIANCE IS ACCEPTABLE TO THEIR INSURANCE CARRIER.

NOTE

VERIFY ALL LOCAL CODES AND ORDINANCES PRIOR TO INSTALLATION. IT IS THE OWNER'S RESPONSIBILITY TO ENSURE THAT THE APPLIANCE MEETS ALL LOCAL CODES AND ORDINANCES

NOTE

LOCAL CODE OR ORDINANCE PLACEMENT REQUIREMENTS TAKE PRECEDENCE AND MUST BE OBSERVED

INSTALLATION MUST BE PERFORMED BY A QUALIFIED INSTALLER

- 1) When placing the solid fuel furnace, the following should be considered:
 - A) Review the minimum clearances to combustibles on page 8.
 - B) Review the recommended stack heights on page 17.
 - C) Do not locate near any combustible materials, gasoline or other flammable liquids or gases.
 - D) Check with insurance company and local codes or ordinances.
 - E) The appliance requires 115 V 15 Amp electrical service to operate.

DANGER

Failure to keep furnace area clear and free of combustible materials, gasoline and other flammable liquids and vapors can result in severe personal injury, death or substantial property damage.

SOLID FUEL APPLIANCES SHALL NOT BE INSTALLED IN A LOCATION WHERE GASOLINE OR OTHER FLAMMABLE VAPORS ARE LIKELY TO BE PRESENT. The solid fuel furnace is designed to be installed inside the building being heated either as a stand alone unit or in combination with another furnace. All installations must be in accordance with local and state codes which take precedence over this manual.

FOUNDATION

The solid fuel furnace must be located on a level 2" minimum thickness concrete foundation pad. At a minimum, there must be a non-combustible pad (concrete, brick or paver) the width of the appliance extending out 48 inches from the front of the unit.

DANGER

A non-combustible pad must be installed in front of the unit to contain any sparks or coals out of the Loading door or Ash door. Fire can result causing severe personal injury, death or substantial property damage.

*****DO NOT INSTALL IN A GARAGE*****

FLOORING

The solid fuel furnace should be placed on a non-combustible floor which must extend a minimum of 6 inches beyond the appliance on both sides and back and 48 inches in front.

DANGER

Do not install appliance on carpeting even if foundation is used. Fire can result, causing severe personal injury, death or substantial property damage.

INSTALLATION: CLEARANCES

The furnace must be installed with these minimum clearances from any NON COMBUSTIBLE surfaces:

Front – 30” Back – underneath the chimney Sides – 12”

The furnace must be installed with these minimum clearances from COMBUSTIBLE surfaces:


Front – 30” Back – 30” Sides – 18” smoke pipe - 27” (side) 18” (back)

The following clearances are recommended for maintenance:

Back – 30” Sides – 36

DANGER

All single wall chimneys must be at least 18” from any combustible surface. Fire can result, causing severe personal injury, death or substantial property damage.

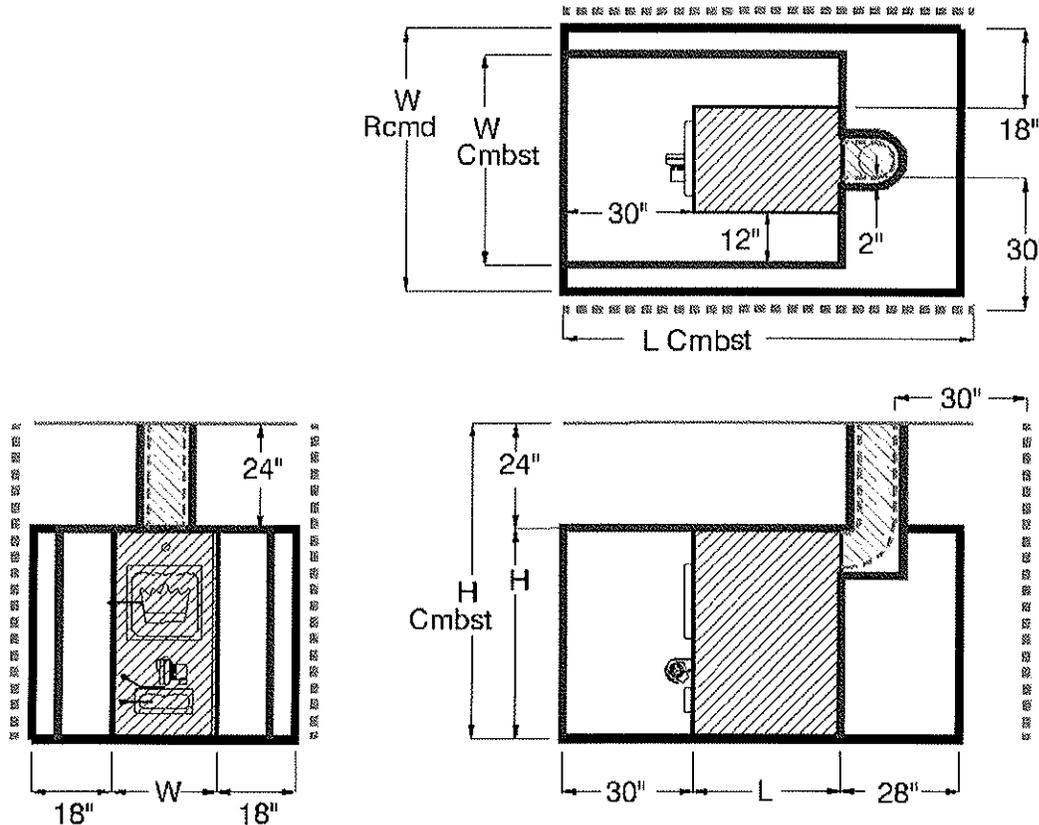


	APPLIANCE DIMENSIONS			Minimum Distance To Combustibles			Minimum Distance To Non-Combustibles		
	L	W	H	Front	Back	Sides	Front	Back	Sides
8095	32”	22”	38”	30”	30”	18”	30”		12”
8150	34”	24”	48”	30”	30”	18”	30”		12”

INSTALLATION: INSPECTING CONTENTS

COMPONENTS SHIPPED LOOSE INSIDE: (see page 34 for component illustrations)

ROYALL INDOOR FURNACE

- Fire Brick
- Fan Limit Control
- Fan Control Center
- draft blower with Gasket
- Wiring Harness Components
 - 4 x 4 Junction Box
 - BX Wire 14/2 (5')
 - BX Wire 14/3 (6')
 - BX Connector, Elbow (1)
 - BX Connector, Straight (4)
- Spring Handles (4)
- Owner's Registration Card
- Manual

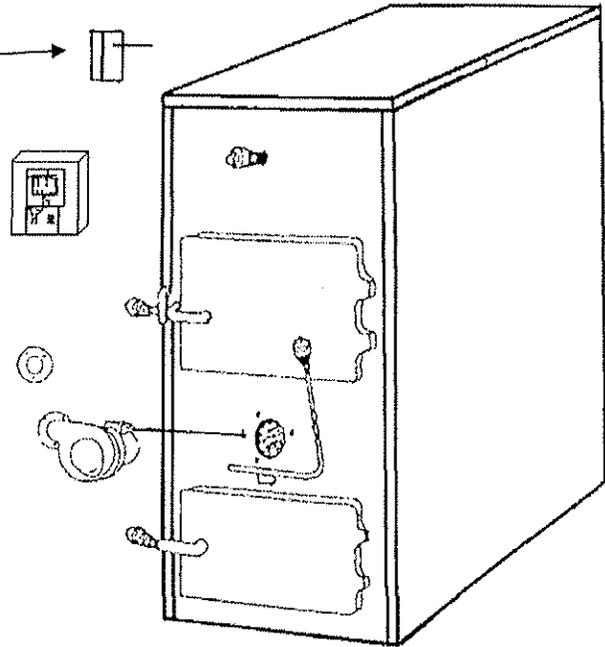

OPTIONAL COMPONENTS

- Filter Box Assembly
- Circulation Blower

BAFFLE

The appliance comes with the cast iron blower baffle installed inside the fire box. Verify that the baffle is in place directly behind the blower mounting flange.

GRATES

The appliance comes with grates installed inside the fire box. Verify that the grates are in place and operate freely.

DOOR GASKETS

The appliance comes with the door gaskets (loading and ash) installed. Verify that the gaskets are in place.

SMOKE DAMPER

The appliance comes with the smoke damper assembly installed. Verify that the damper handle moves freely, opening the smoke bypass plate.

ASH PAN


The appliance comes with the ash pan stored in the ash trough. Open the ash door and remove the ash pan. The ash pan should not be stored inside the ash trough during operation, as it will warp and be too hot to handle. Store the ash pan near the appliance.

WARNING

DO NOT store the ash pan in the ash trough during operation. If the ash pan is stored inside the appliance during operation, warping will occur. Wear gloves when handling the ash pan to prevent burn injuries.

INSTALLATION: FIREBRICK


- 1) The appliance comes with the fire brick boxed inside the appliance
 - Brick size: 9" x 4-1/2" x 1-1/2"
 - (16) Full bricks
 - (2) Full bricks cut diagonally in half
- 2) Install Bricks as follows:
 - A) Remove T-bar from back of the fire box.
 - B) Install the (2) full bricks and (2) half bricks in the back of the fire box.
 - C) Bolt the T-bar back in place to hold the bricks (DO NOT tighten nuts at this point).
 - D) Install the (2) bricks above the T-bar and tighten nuts tightly.
 - E) Install the bricks on the sides of the fire box. The (2) bricks closest to the front must be installed horizontally.

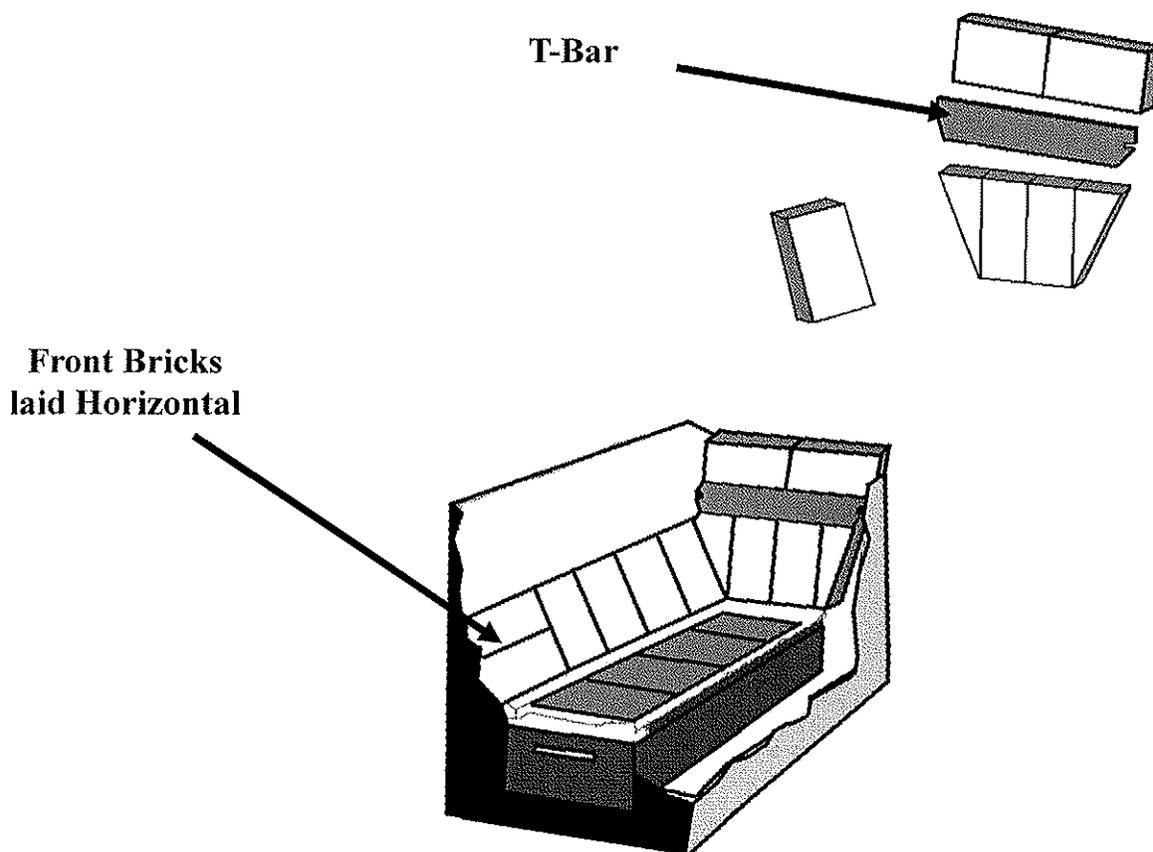

INSTALLATION: SHROUD

SHROUD PREPARATION

- 1) For "Series" installation (see page 12):
 - A) Cover the filter box opening on the rear of the appliance. Manufacture a cover from standard ducting material
 - B) Cut an opening in shroud side for cold air return duct. Opening should match duct dimensions out of the existing furnace to maintain system balance. Return duct can be located on either side of the appliance.
- 2) For "Parallel" installation (see page 14): nothing further is required.

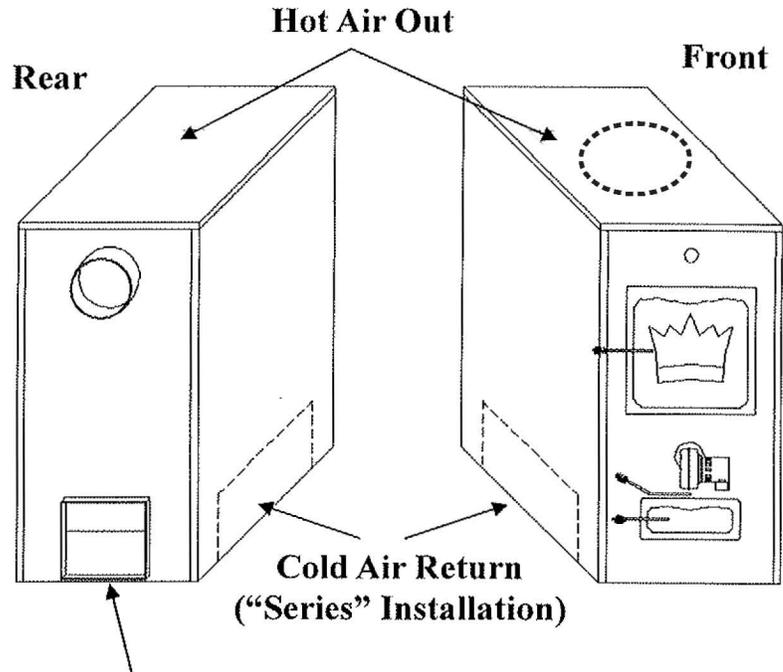


Filter Box Mount ("Parallel" Installation)

SHROUD ASSEMBLY


The appliance comes with the shroud installed. The shroud must be removed to cut openings for duct work. Re-install shroud as follows:

- 1) Shroud sides are installed from the top. The "S" bent edges on the shroud sides grip the flanges on the bottom of the furnace.
- 2) Then slide the sides front to back until the "S" bends grip the back of the furnace.
- 3) Shroud top fits snugly over the front, rear and sides per diagram.
- 4) Use 4 sheet metal screws (2 on each side) to fasten the top to the sides.

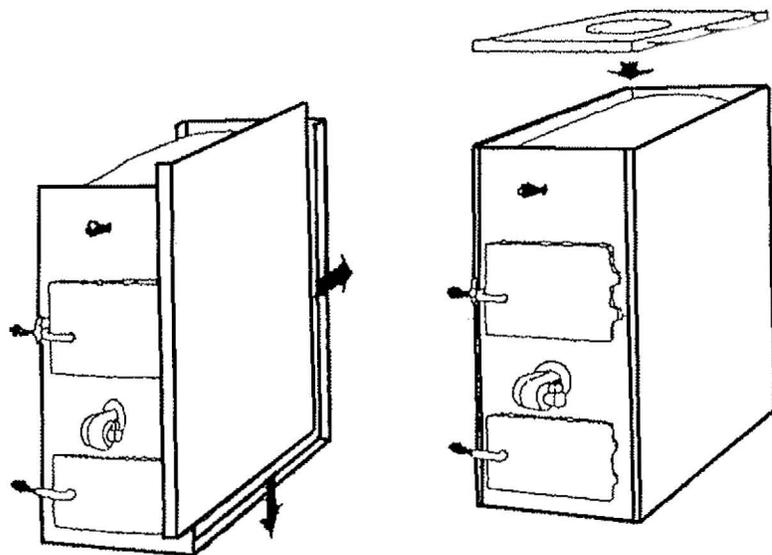

INSTALLATION WITH AN EXISTING FURNACE

SERIES WITH EXISTING FURNACE

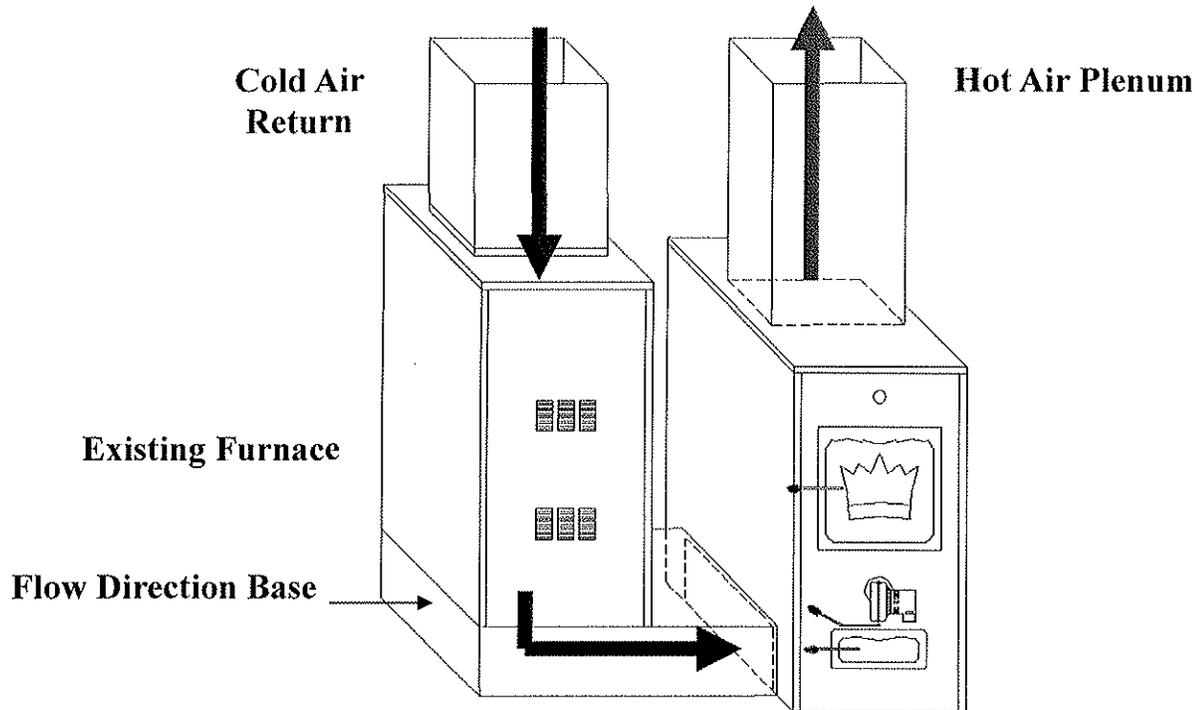

Description of Operation

- 1) The circulation blower on the existing furnace draws air through the cold air return and the furnace.
- 2) The air passes into the bottom of the solid fuel furnace, which heats the air.
- 3) The heated air circulates through the heating ducts.
- 4) The existing furnace is controlled by a separate thermostat.
- 5) If the existing furnace fires, air flow remains the same through both units.

Required Additional Components

- 1) The existing furnace must be a "counter flow" design ("down flow").
- 2) The existing furnace must be mounted on a flow direction base.


Installation

- 1) Place the counter flow (gas, LP, oil or electric) furnace on top of an air flow direction base.
- 2) Cut rectangular opening in the solid fuel furnace shroud to match the dimensions of the air flow direction base.
- 3) The solid fuel furnace should be located approximately 8 inches from the existing furnace.
- 4) Connect the solid fuel furnace to the air flow direction base with sheet metal. Fasten the sheet metal with screws and caulk.


INSTALLATION: FILTER BOX (optional)

If installing the ROYALL furnace in Parallel with the existing furnace (see page 14), construct and install the filter box as follows:

- 1) Mount the circulation blower on the rear of the appliance using 4-1/4" x 3/4" screws.
- 2) Assemble and mount the Filter Box over the Circulation Blower using the 1/4" x 3/4" screws already in place.
 - A) The side panel with the 12" hole can be installed on either side of the filter box for convenient installation of the cold air return duct. For better air flow, it is recommended that this panel be installed opposite of the motor of the circulation blower.
 - B) Attach the bottom panel to the two side panels and tap until the panels lock firmly in place.
 - C) Attach the top panel to the side panel opposite of the cold air return duct opening.
 - D) Attach the back panel with sheet metal screws.
 - E) Attach the filter channel to the side panel with the cold air return opening.
 - F) Insert the filter.
- 3) Mount the fan control center on the side of the filter box (see page 18).

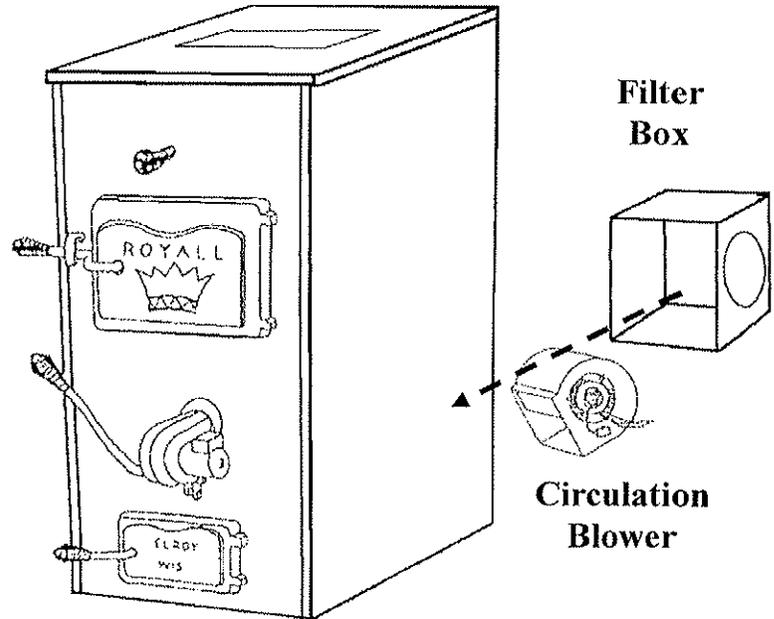


Filter Box

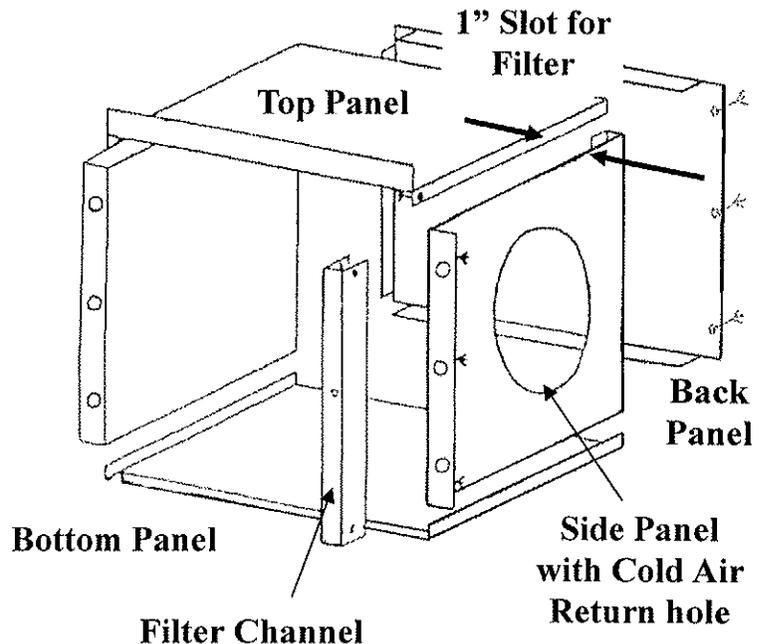

TYPICAL SYSTEM SCHEMATICS

PARALLEL WITH EXISTING FURNACE

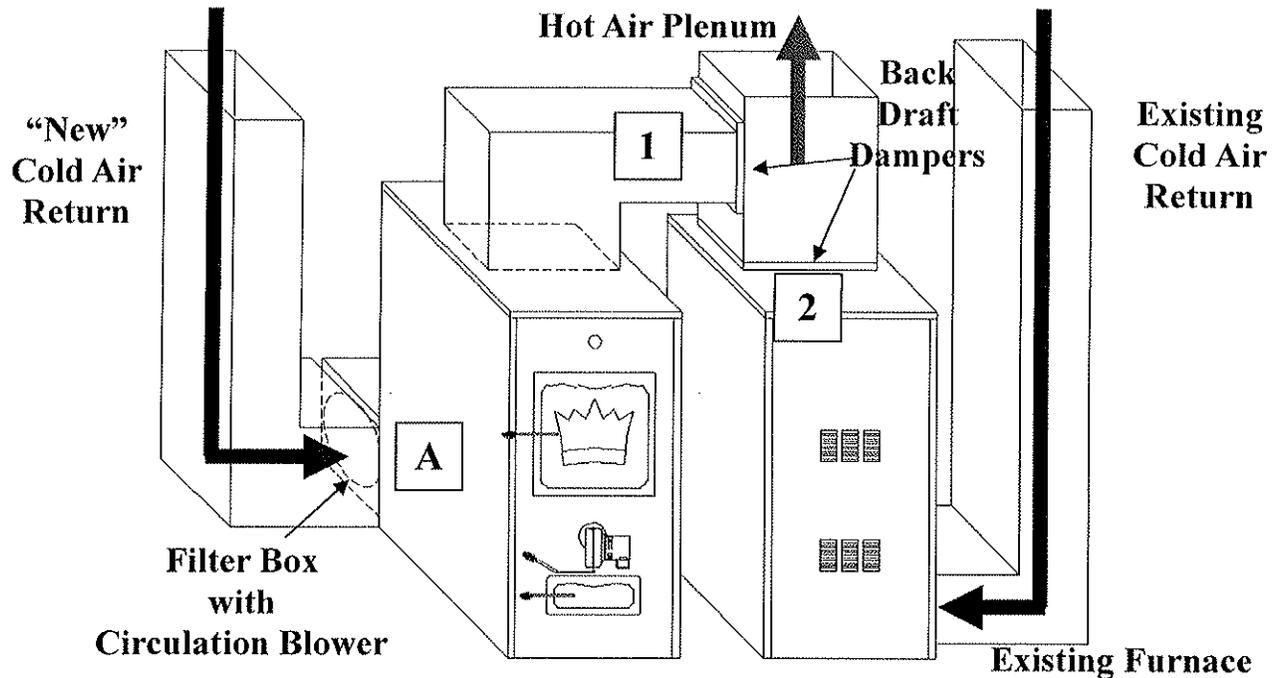

DESCRIPTION OF OPERATION

- 1) The circulation blower ("A") draws air through the "new" cold air return and moves it through the solid fuel furnace, which connects to the hot air plenum above the existing furnace.
- 2) A back draft damper ("1") opens, allowing the heated air to circulate through the heating ducts.
- 3) A second back draft damper ("2") closes, preventing the heated air from circulating through the existing furnace.
- 4) The existing furnace is controlled by a separate thermostat.
- 5) If the existing furnace fires, back draft damper ("2") will automatically open and back draft damper ("1") will automatically close.


REQUIRED ADDITIONAL COMPONENTS

- 1) Filter box.
- 2) Circulation blower.
- 3) (2) Back draft dampers (by others).

TYPICAL SYSTEM SCHEMATICS (Cont.)

INSTALLATION

- 1) Install a new cold air return from existing ducts to the solid fuel furnace.
- 2) Install a back draft damper (air flow baffle) between the solid fuel furnace hot air outlet and the existing furnace hot air plenum.
- 3) Install a back draft damper (air flow baffle) between the existing furnace and the existing hot air plenum.
 - A) The back draft damper MUST be installed above any air conditioning "A" coils.
 - B) The back draft damper MUST be installed below the connection to the solid fuel furnace back draft damper.

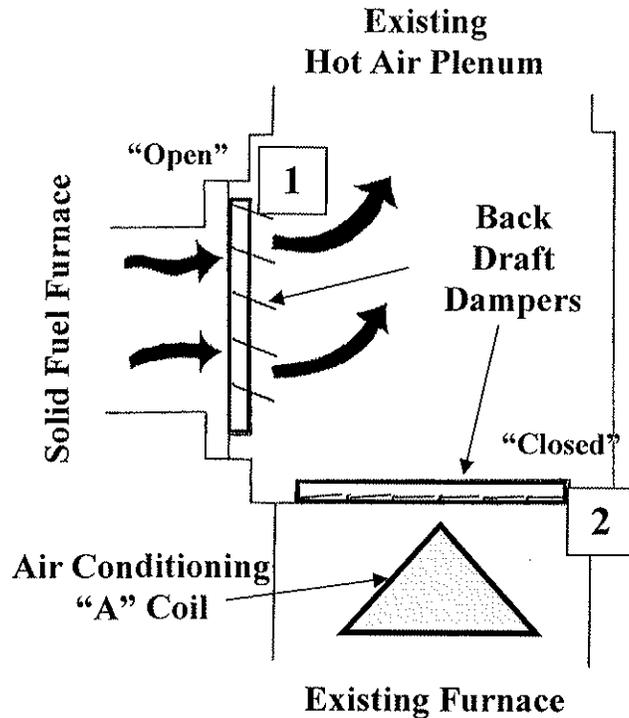

DANGER

For your safety, **turn off electrical power supply at service entrance panel before making any electrical connections** to avoid possible electric shock hazard. Failure to do so can cause severe personal injury or death.

COMPLEX SYSTEMS SHOULD BE DESIGNED BY A HEATING PROFESSIONAL

INSTALLATION: VENTING

DANGER

All single wall chimneys must be at least 18" from any combustible surface. Fire can result, causing severe personal injury, death or substantial property damage.

DANGER

A major cause of chimney-related fires is failure to maintain required clearances (air spaces) to combustible materials. It is of the utmost importance that all chimneys be installed in accordance with the manufacturer's instructions.

CHIMNEY MATERIAL

The Furnace must be connected to either a:

- 1) Class "A" masonry chimney.
- 2) All Fuel metal insulated chimney (8").
- 3) Listed type "HT" double wall chimney approved for temperatures up to 1400 °F (8").

CHIMNEY CONNECTORS

Connectors shall be installed to join appliance to the vertical chimney unless chimney is attached direct.

- 1) Chimney connector can either be:
 - A) 8" galvanized stove pipe.
 - Maintain 18" clearance to combustibles.
 - Minimum thickness: .28 inches.
 - B) 8" listed type "HT" double wall chimneys
 - Maintain 2" clearance to combustibles
- 2) Furnace must be the only heating appliance connected to a single chimney flue.
- 3) Keep the connector as straight and short as possible.
 - A) Minimize elbows.
 - B) Maximum horizontal distance between furnace and chimney: 6 Ft.
 - C) "Male" end should point back to furnace.
 - D) Horizontal runs must be pitched back to the furnace in accordance with local Building Codes (typically 1/4" pitch per Ft of run).
 - E) Secure each connection with a minimum of 3 screws.
- 4) Assemble in accordance with the vent manufacturers instructions. Additional sections may be required to clear the peak of the structure. Do not install more than one appliance per flue.
- 5) When burning coal, a barometric draft damper **MUST** be installed between the furnace and the chimney to ensure adequate draft.

DANGER


DO NOT install more than one appliance per flue. Flue gas spillage and carbon monoxide emissions can occur causing severe personal injury or death.

CHIMNEY MUST BE INSTALLED OR INSPECTED BY A PROFESSIONAL AND MEET ALL LOCAL AND STATE REQUIREMENTS AND CODES FOR WOOD OR COAL BURNING APPLIANCES

INSTALLATION: VENTING (Cont.)

CHIMNEY HEIGHT

To prevent downdrafts, chimney, or vent without a listed cap should extend at least 3 feet above the highest point where it passes through a roof and at least 2 feet higher than any portion of a building within a horizontal distance of 10 feet. A chimney or vent must not extend less than the distances stated above. Check local codes or ordinances for additional requirements

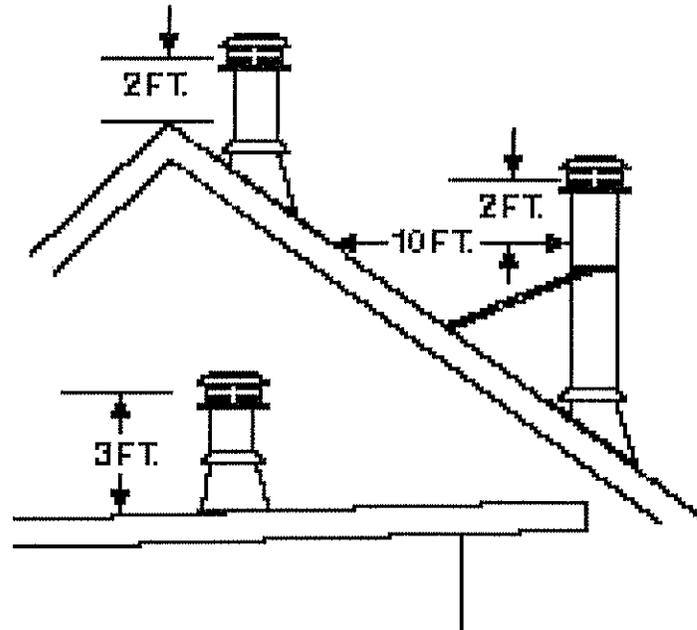

Nearby structures, trees or hills can cause downdraft conditions which force smoke to the ground. Chimney height may have to be raised to overcome downdraft conditions.

NOTE

Improper use or failure to maintain the furnace may cause nuisance conditions. Persons operating this solid fuel furnace are responsible for operation so as not to cause nuisance conditions. Even proper use and maintenance of the furnace, and meeting the distance and stack height recommendations and requirements in State and local regulations may not always be adequate to prevent nuisance conditions in some areas due to terrain or other factors.

**ALL LOCAL AND STATE REGULATIONS OR CODES AND VENTING SYSTEM
MANUFACTURER'S INSTRUCTIONS TAKE PRECEDENCE OVER THESE
INSTRUCTIONS**

**ALL SOLID FUEL APPLIANCES CREATE VISIBLE SMOKE DURING SOME
OPERATING CONDITIONS**

INSTALLATION: COMPONENT ASSEMBLY

INSTALL COMPONENTS AS FOLLOWS

1) FAN LIMIT CONTROL

- A) The fan limit control may be installed on either side.
- B) Drill a 3/4" diameter hole approximately 2-1/2" inches down centered on the desired side.
- C) Insert the sensor of the fan limit control and attach the control with the provided sheet metal screws.

2) FAN CONTROL CENTER

- A) The fan control center should be installed on the same side as the fan limit control.
- B) If installing the furnace in parallel with the existing furnace, then mount the fan control center on the filter box (see page 13).
- C) Attach the 4 x 4 junction box with sheet metal screws.
- D) Attach transformer/relay plate to junction box.

3) DRAFT BLOWER

- A) Mount the draft blower using the gasket to the front of the furnace with the three screws furnished.
- B) Ensure that the gasket seals tightly between the blower and the appliance flange.





Failure to mount fan properly will result in the furnace overheating.

4) SPRING HANDLES (4)

- A) Turn the spring handles on to the levers in a clockwise direction.

Optional Filter Box

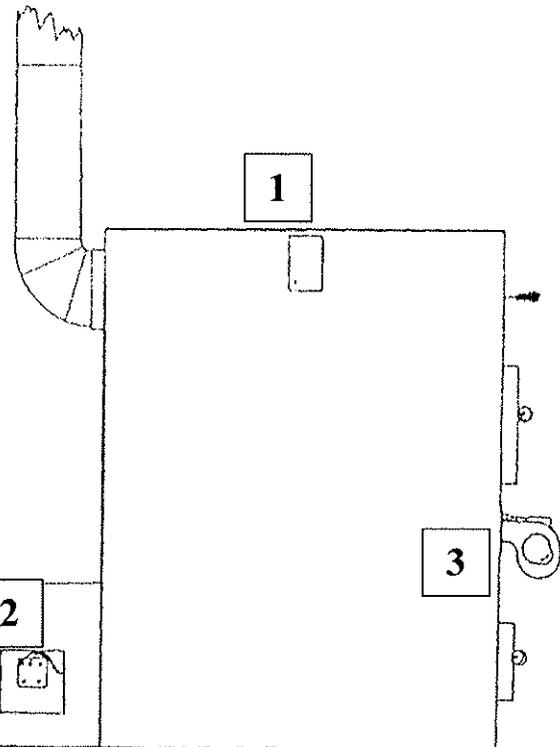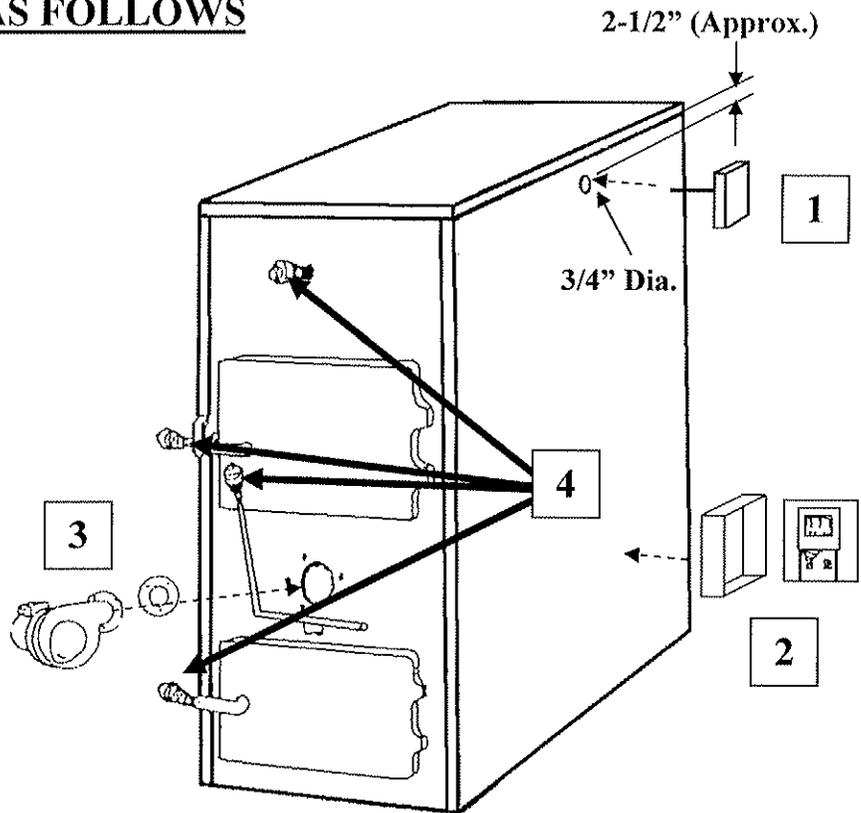

INSTALLATION: ELECTRICALS

BASIC ELECTRICALS

For your safety, **turn off electrical power supply at service entrance panel before making any electrical connections** to avoid possible electric shock hazard. Failure to do so can cause severe personal injury or death.

DANGER

Ensure power is shut off while making connections. Failure to do so may result in severe personal injury or death.

ELECTRICAL INSTALLATION MUST COMPLY WITH:

- 1) National Electrical Code and any other national, state, provincial or local codes or regulations.
- 2) In Canada, CSA C22.1 Canadian Electrical Code Part 1, and any local codes.

Appliance must be **electrically grounded** as required by National Electrical Code ANSI/NFPA 70 – latest edition. Ensure **ground wiring** is installed per wiring diagram. Good grounding is extremely important for proper operation.

INSTALL WIRING AS FOLLOWS

1) SWITCH JUNCTION BOX

A) The following components are not included and must be provided by the installer:

- 4 x 4 junction box.
- (2) SPST switches.

B) Attach 4 x 4 junction box to the furnace.



C) Route power (115 V, 60 Hz, 15 Amp) to the junction box.

D) Install the “A” leg of the wiring harness between the switch junction box and the control center junction box.

- “A” leg has (4) wires: Black/White/Red/Green (Ground)
- Route White wire as shown.
- Route Green ground wire as shown.

E) Connect the MASTER switch as shown.

F) Connect FAN switch as shown.

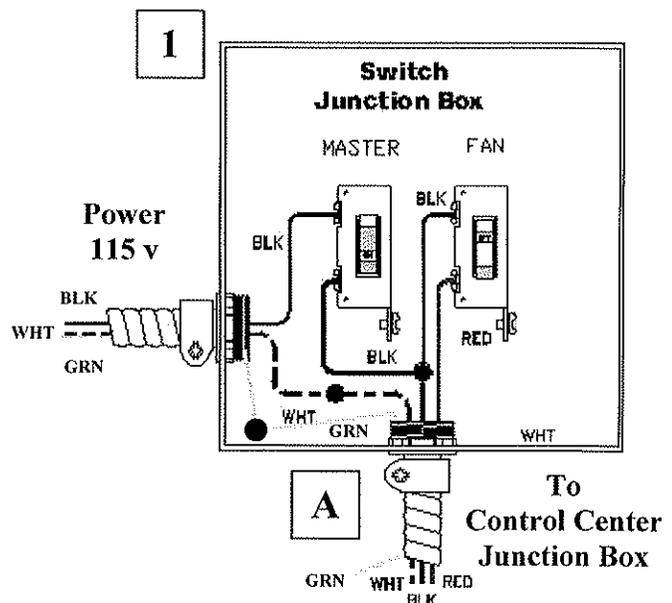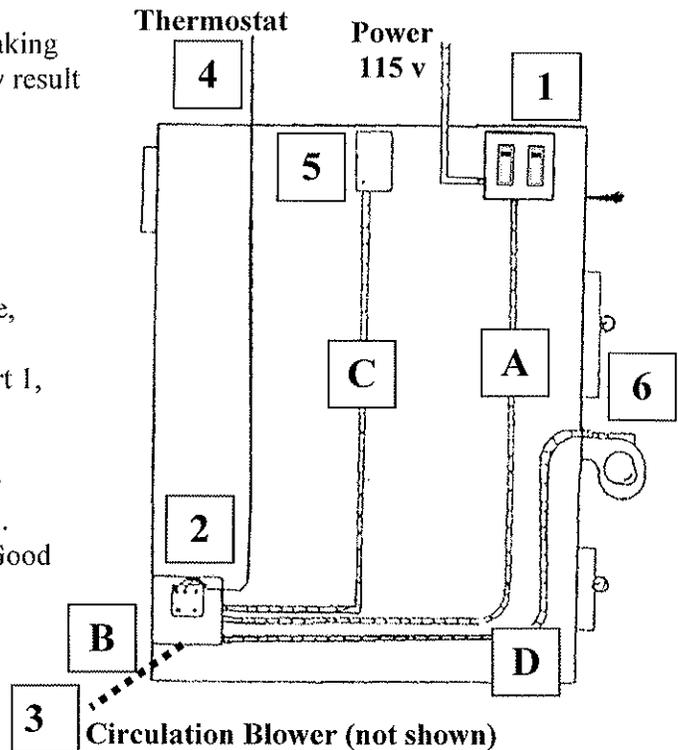

INSTALLATION: ELECTRICALS (Cont.)

2) CONTROL CENTER JUNCTION BOX

A) Install the "A" leg of the wiring harness from the switch junction box.

B) Install the "C" leg to the fan limit control.


- "C" leg has (3) wires:
Black/White/Red.

C) Install the "D" leg to the draft fan.

- "C" leg has (3) wires:
Black/White/Green.

D) Connect the wires as shown:

- Wire nut the White wires from legs "A", "D" and the control transformer.
- Wire nut leg "A" Red to transformer Black.
- Wire nut leg "C" Red to relay Black.
- Wire nut leg "D" Black to relay Red.
- Wire nut together all of the Green wires.

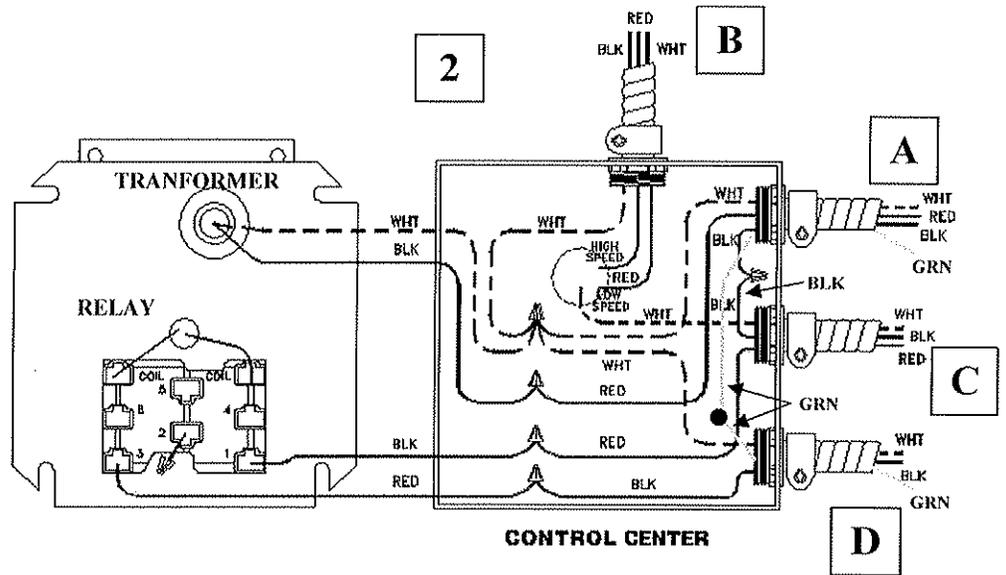


3) CIRCULATION BLOWER (LEG "B")

A) If the furnace is installed in SERIES with the existing furnace:

- Install leg "B" (3 wires: Black/Red/White) to the circulation blower on the existing furnace.
- Connect leg "C" White wire to either the blower Red or Black wire depending on the desired blower speed.
- Connect the "A" White wire to the blower White wire.

B) If the furnace is installed in PARALLEL with the existing furnace:


- Connect leg "C" White to either the blower Red or Black wire depending on the desired blower speed.
- Connect blower White to the White wires from legs "A", "D" and the control transformer.

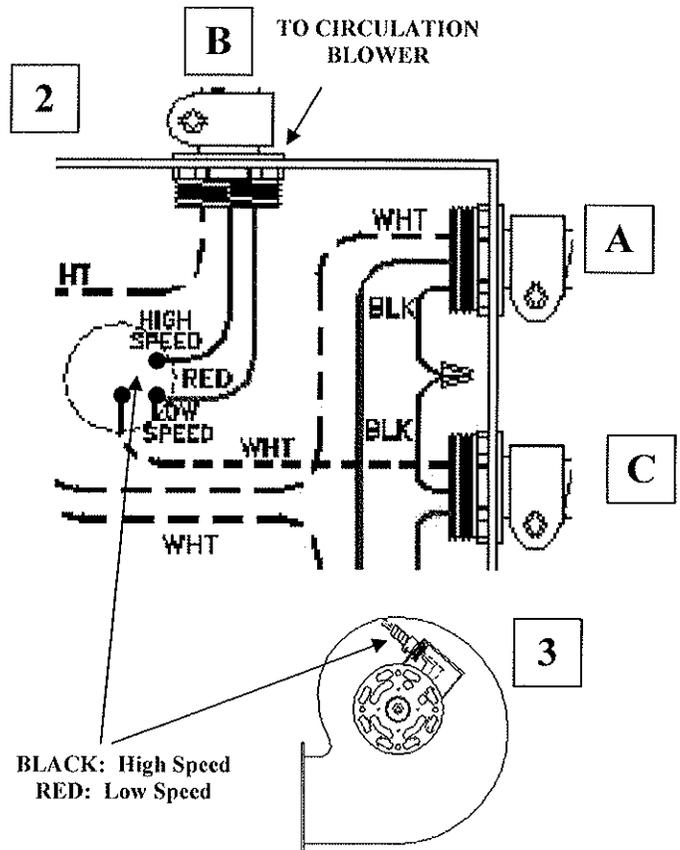

INSTALLATION: ELECTRICALS (Cont.)


4) ROOM THERMOSTAT

- A) Close the control center junction box.
- B) Attach thermostat wire to the heating contacts on the thermostat (refer to thermostat manufacturer's instructions).
- C) Attach other end of thermostat wire to "R" and "G" contacts on the control center.

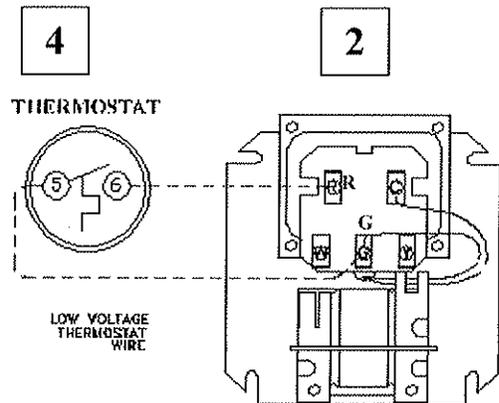


5) FAN LIMIT CONTROL

- A) Attach leg "C" (3 wires: Black/Red/White) to the fan limit control.
- B) There should be a factory installed jumper between the top of the limit and fan switches. If not, then install a jumper wire across these contacts.
- C) Attach Black wire to the top of the limit switch (Left).
- D) Attach Red wire to the bottom of the limit switch (Left)
- E) Attach White wire to the bottom of the Fan Switch (Right)

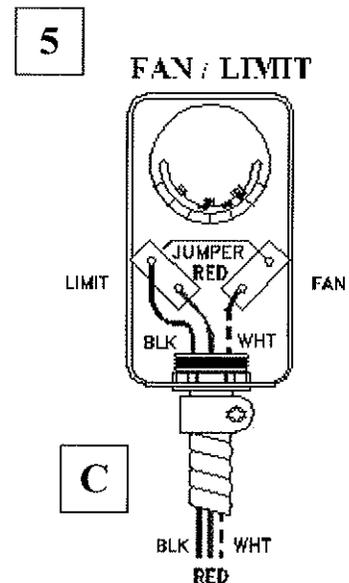


6) DRAFT BLOWER


- A) Attach leg "D" (3 wires: Black/White/Green) to the draft blower
- B) Wire nut leg "D" Black to one of the blower wires.
- C) Wire nut leg "D" White to the other blower wire.
- D) Attach leg "D" Green to the grounding screw on the blower.

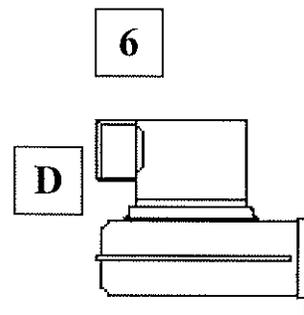

SCHEMATIC WIRING DIAGRAM

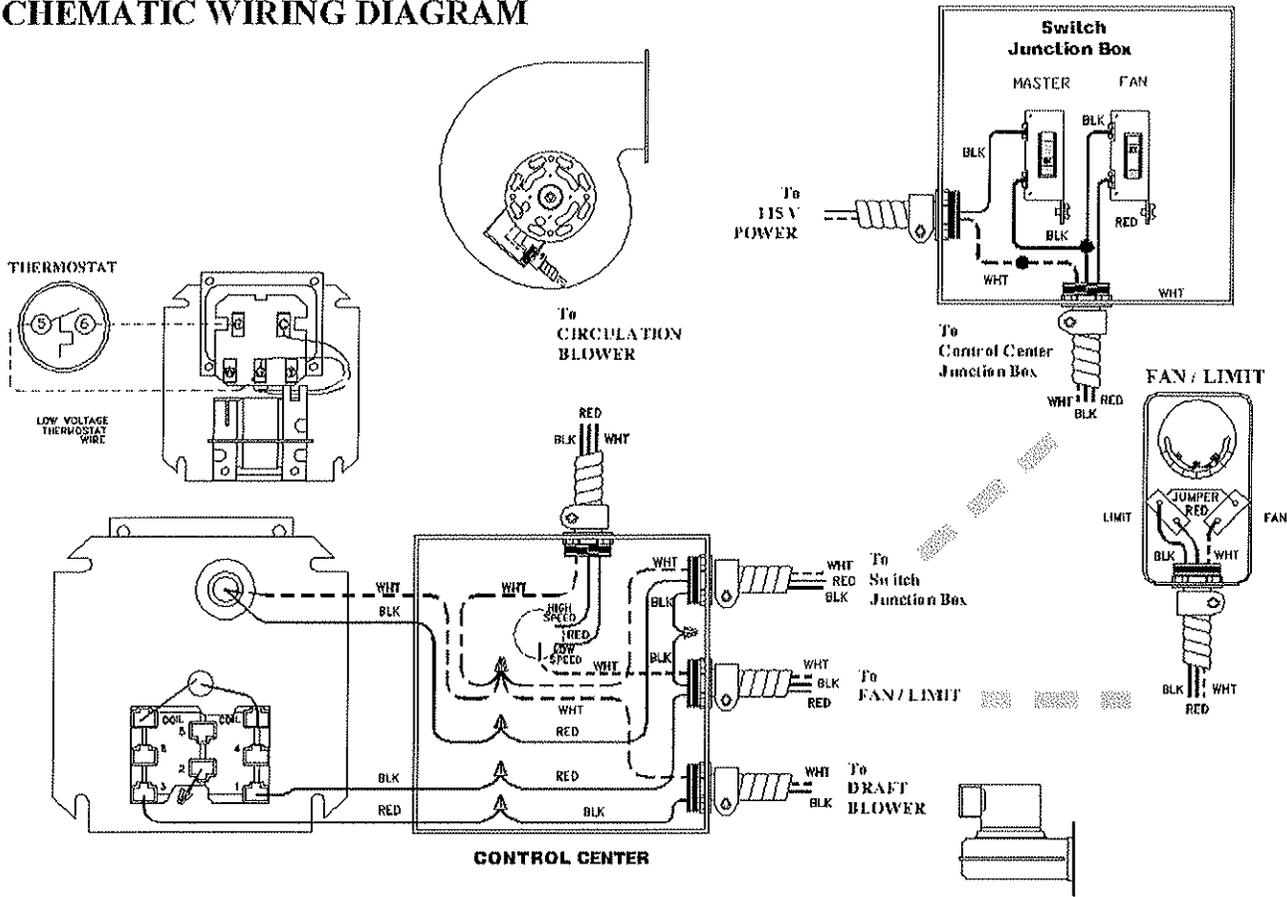

LADDER WIRING DIAGRAM

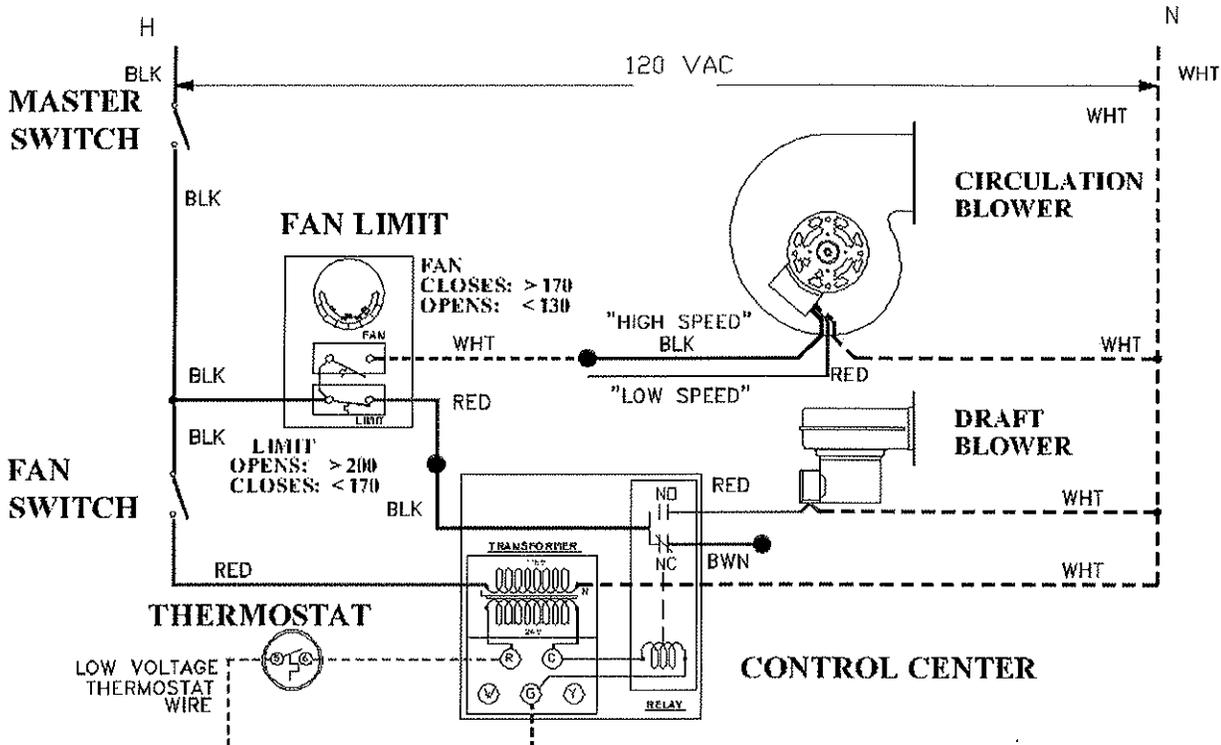

OPERATION

FOLLOW ALL SAFETY PRECAUTIONS

BEFORE STARTING A FIRE

- Cycle the FAN switch to check for proper draft blower operation.
- Inspect the loading door gasket before lighting the first fire and a few days after, looking for any indications of a poor seal.

DANGER

DO NOT use gasoline, kerosene or other flammable liquids. These could cause a flash fire or explosion resulting in serious personal injury and property damage.

DANGER

DO NOT BURN GARBAGE, HOUSEHOLD WASTE OR YARD WASTE. In most areas this is illegal. The unit is designed to burn seasoned split cord wood or coal, burning other materials can reduce the life of the unit and will void the warranty.



FIRING THE SOLID FUEL FURNACE

- Load the appliance with regard to the required heat load. On mild days, load less fuel in to the appliance. A small, intense fire will burn cleaner, more efficiently and with less creosote formation than a large smoldering fire.

LIGHTING THE INITIAL FIRE (SAME FOR WOOD OR COAL)


- 1) Place the FAN switch in the OFF position.
- 2) Pull smoke bypass damper rod out.
- 3) Build a **SMALL** fire using paper and kindling. Softwoods make good kindling because of the resin they contain and the fact that they split easily. Hardwoods are better on top of the kindling to give a longer lasting fire.
- 4) When the fire is burning well add larger pieces of wood.
- 5) If burning coal,
 - A) After the wood fire is burning well, place larger pieces of wood to form a stable base for the coal. It will take ten to twenty minutes before they are thoroughly ignited and ready for the coal. Adding the coal too soon could cut the air supply and smother the fire.
 - B) Add a thin layer of coal, preferably smaller chunks to the wood fire, being careful not to disturb it too much or cut off the draft.
 - C) After the coal is ignited and burning well, add a second heavier layer until it is even with the top to the firebrick. Ensure that a red spot of glowing coals is visible after the adding new coal. Do not smother the fire. This will also help ignite the gases given off by the new charge. A deep charge will give more even heat and a longer burn time. It may take one to two hours before the whole bed is fully ignited.

Condensation in the fire box will occur for the first 3 or 4 days of operation resulting in water or water/creosote combination running out of the ash door. This should clear up in less than a week. You may want to place a pan under ash door to keep concrete clean.

OPERATION (Cont.)

SETTING THE FAN LIMIT CONTROL



- 1) Set the lower arm (left tab) to 130. This sets the temperature below which the circulation blower turns "OFF".
- 2) Set the middle arm (middle tab) to 170. This sets the temperature above which the circulation blower turns "ON".
- 3) Set the upper arm (right tab) to 200. This sets the temperature above which the draft blower turns "OFF".

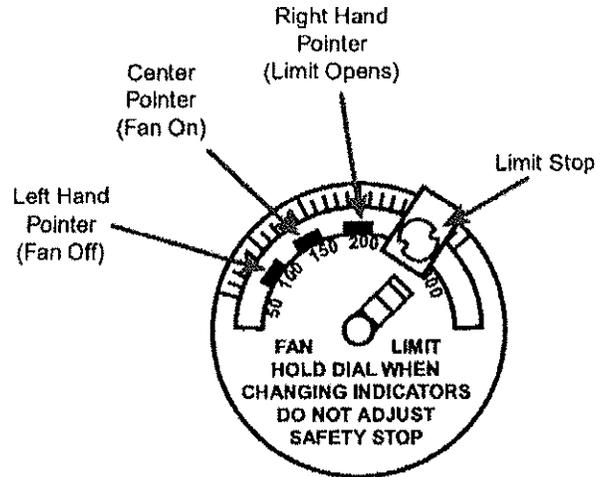

SETTING THE DRAFT DAMPER

The draft damper should be adjusted to allow the circulation blower to continuously circulate 140 degree heated air instead of cycling until the room thermostat is satisfied. The damper plate can be moved to allow more air into the fire box, increasing temperature quicker.

- 1) Verify that the fan limit settings are proper.
- 2) Adjust the room thermostat until the draft blower begins to operate.
- 3) After the furnace plenum temperature reaches 170 (as indicated on the fan limit control), the circulation blower should start. Adjust the draft damper ("dog ear" shaped flap on the draft blower) until the plenum temperature indicated on the fan limit control stabilizes at 140.
- 4) The draft damper will need periodic adjusting in the spring and fall seasons. If the plenum temperature is consistently above 140 degrees, then close down on the damper. If it is consistently below 140 degrees, then open the damper.

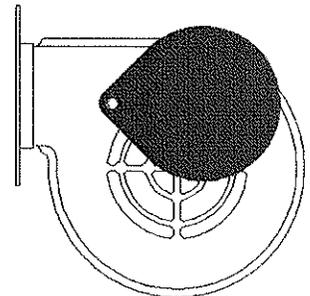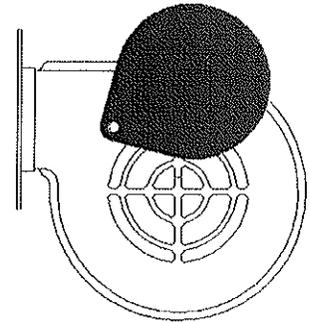

OPERATION (Cont.)

BURNING WOOD

Burn only split cordwood that has been seasoned for 12-18 months. Burning unseasoned wood is wasteful and inefficient using much of the combustion energy to boil off the excess moisture. Ideally the wood should be split to aid in seasoning and should be around 25% moisture content by weight.

The following are general guidelines for wood selection:

- Hardwoods burn better than softwoods.
- Larger pieces burn better than small pieces.
- 25% moisture content is optimum:
 - ~ Higher moisture content wastes energy boiling off water.
 - ~ Lower moisture content burns rapidly and inefficiently.

The type of wood will determine how often the unit will have to be refueled. It may take a week of close attention to set up a time table for refueling. Generally 8 to 10 hours between fillings can be expected, depending on the heat loss of the building being heated. The best time for refueling is when the wood is burned down to about 4" to 6" bed of coals. It is important to maintain a 4" to 6" bed of coals for re-ignition of new wood when refueling.

REFUELING

- 1) Place FAN switch in OFF position.
- 2) Pull smoke bypass damper rod out and wait one minute.
- 3) Open the fuel loading door slowly.
- 4) Work ashes down through the grate with a poker and shaker grate. Ensure that a 4"-6" deep coal bed remains.
- 5) Fill fire box full with wood. Do not load past the top of the loading door opening.
- 6) Close fuel loading Door.
- 7) Open the ash door. Insert the ash pan and scoop out ashes.
- 8) Empty ashes into a safe container. Do not store the ash pan in the unit during operation.
- 9) Ensure that the ash door is tightly closed.
- 10) Place FAN switch in ON position
- 11) Push the smoke bypass damper rod in.

DO NOT LOAD WOOD ABOVE THE LOADING DOOR OPENING

OPERATION (Cont.)

BURNING COAL

A barometric draft damper **MUST** be installed between the solid fuel furnace and the chimney.

Determine and research what types of coal are commonly available in your area. You will get more heat and longer burn periods if you are educated on how to burn the type of coal available to you. Number 3 "hard" coal tends to work best. When burning any type of coal in the furnace do not fill the fire box above the fire brick. Some types of coal have a high temperature and can cause damage to the furnace if filled above the brick. Most coal requires more air for combustion than wood. This is due to the higher kindling temperature needed to burn these types of coal. It usually takes two or three days to determine the correct positioning of the blower damper to produce a satisfactory burn.

The type of coal and heat demand determine how often the unit will have to be refueled. It may take a week of close attention to set up a time table for refueling. Generally 8 to 10 hours between fillings can be expected, depending on the heat loss of the building being heated. The best time for refueling is when the fuel is burned down to about 6" to 8" bed of coals. It is important to maintain a 6" to 8" bed of coals for re-ignition of new coal when refueling.

REFUELING

- 1) Place FAN switch in OFF position.
- 2) Pull Smoke bypass damper rod out and wait one minute.
- 3) Open the fuel loading door slowly.
- 4) Pull the glowing coal to the front of the fire box. Try not to disturb the fire too much.
- 5) Add new coal to the back of the fire box, being careful not to seal off the top. It is important to leave a red spot of glowing coals visible after adding new coal to ensure that the fire has not been smothered.
- 6) After the new coal is well ignited add more coal to the front area that was left visible.
- 7) When refueling process is completed you should have a bed of coal even with the firebrick at both sides of the fire box and heaped to the center of the fire box.
- 8) Close Fuel loading door.
- 9) Gently move the shaker grate handle. A few short movements are better than a long movement of the Grate. The object is to remove a small amount of the ashes without disturbing the fire. The fire should just be settled down about a half an inch or an inch in the fire box until the first live coals start to fall. The fire may go out if you shake it too much. It is not necessary to shake down the ashes each time you refuel.
- 10) Open the ash door. Insert the ash pan and scoop out ashes.
- 11) Empty ashes into a safe container. Do not store the ash pan in the unit during operation.
- 12) Ensure that the ash door is tightly closed.
- 13) Place FAN switch in ON position.
- 14) Push the smoke bypass damper rod in.

DO NOT LOAD COAL ABOVE THE FIREBRICK

OPERATION (Cont.)

- The solid fuel furnace will maintain air temperature based on the fan limit control settings.
- Room temperature is controlled by a thermostat in the room.
- The loading door and ash removal door must tightly shut and the seals maintained in good condition during operation, otherwise overheating will occur.

WHEN LOADING

- Place FAN switch in OFF position.
- Open loading door – pausing momentarily between the first latch and the safety latch to allow any combustion gases to burn off.

WARNING

The solid fuel furnace will not operate without electrical power. The combustion air shutter **MUST NOT** be manually opened or altered for any reason; overheating will result.

WARNING

The loading door and ash door must be closed and latched during operation. Failure to latch door will result in overheating which could damage the appliance and controls.

CREOSOTE FORMATION

All wood burning devices create some creosote.

- 1) When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote.
- 2) Creosote vapors condense in the relatively cool chimney flue of a slow burning fire.
- 3) As a result, creosote residue accumulates on the flue lining.
- 4) When ignited this creosote makes an extremely hot fire.
- 5) The chimney connector and chimney should be inspected at least twice monthly during the heating season to determine if a creosote buildup has occurred.
- 6) If creosote has accumulated it should be removed to reduce the risk of a chimney fire.

“HEAT SAVERS” ADDED TO THE CHIMNEY ARE NOT RECOMMENDED AS THEY CAN INCREASE CREOSOTE PROBLEMS

DISPOSAL OF ASHES

- 1) Ashes should be placed in a metal container with a tight fitting lid.
- 2) The closed container of ashes should be placed on a noncombustible floor or on the ground, well away from all combustible materials, pending final disposal.
- 3) If the ashes are disposed of by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have thoroughly cooled.

DO NOT STORE THE ASH PAN IN THE UNIT DURING OPERATION

NOTE

Improper use or failure to maintain a solid fuel furnace may cause nuisance conditions. Persons operating this appliance are responsible for its operation, so as not to cause nuisance conditions. Even proper use and maintenance of a solid fuel furnace, meeting the distance and stack height recommendations and meeting all requirements in State and Local Regulations may not always be adequate to prevent nuisance conditions in some areas due to terrain or other factors.

EMERGENCY ACTIONS

OVER HEATING

- 1) Manually turn off the draft blower at the FAN switch (place switch in OFF position).
- 2) **DO NOT TURN OFF THE MASTER SWITCH.** The circulation blower must have power to remove heat from the appliance.
- 3) Turn the thermostats fully up in the structure being heated by furnace to remove heat from the appliance as fast as possible.
- 4) Allow the appliance to cool down.
- 5) If the furnace does not cool down then, with a shovel, remove as much of the wood and coals from the fire box. Place the removed wood and coals away from combustibles.
- 6) Once the appliance has cooled down;
 - Determine and correct the cause of overheating

CHIMNEY FIRE

- 1) **CALL 911.**
- 2) **EVACUATE THE BUILDING.**
- 3) Manually turn off the draft blower at the FAN switch (place switch in OFF position).
- 4) Leave the doors securely closed.

LOSS OF ELECTRICAL POWER

- 1) Shut Blower Damper fully.
- 2) Remove the Filter to aid the natural draft through the duct work.
- 3) Restore Electrical Power.
- 4) If electrical power is off for a long duration, the appliance will probably over heat. Remove fuel and coals from the fire box. Place removed fuel away from combustibles.

MAINTENANCE

Keeping the solid fuel furnace in good repair will result in more efficient operation and longer appliance life. You are responsible for safely maintaining the unit. Follow the **Service and Maintenance** procedures given throughout this manual and in component literature shipped with the appliance.

DANGER

Failure to perform the service and maintenance could result in damage to the furnace or system. Failure to follow the directions in this manual and component literature could result in severe personal injury, death or substantial property damage.

DAILY

- **Grates** – For best performance level the coal distribution on the grates prior to each loading. (A garden hoe works well). There should be very little ashes on top of the grates. Ash build up will restrict air going through the grate, promoting incomplete combustion and creosote formation.
- **Remove ashes** - Ashes should be removed with the ash pan daily. Excessive buildup of ashes in the ash trough will eventually plug up the unit.

EVERY TWO WEEKS (During Heating Season)

- Examine chimney and chimney connector. Clean any soot or creosote..

MONTHLY

- Examine door gasket and draft fan shutter. Ensure airtight seal. Replace as required.

EVERY THREE MONTHS

- **Blower motor:** Place a few drops of S.A.E. 20 motor oil in each of the two oil cups.

DANGER

Use only **S.A.E. 20 motor oil** to lubricate the motor. Do not use universal household oils. Motor could be damaged, resulting in possible severe property damage.

END OF SEASON

- **Power:** Turn off power supply at the appropriate circuit breaker.
- **Chimney:** Clean and inspect chimney. *Cap the chimney to keep rain water out.*
- **Fire box & Ash trough:** Remove ashes, soot, and hardened deposits from the fire chamber by using putty knife or wire brush. Coat inside of fire box with a light coat of motor oil to protect steel during the off season.
- **Doors:** Oil door hinges and latch guide.

DANGER

Moisture from rain or condensation must not be allowed to accumulate in the fire box or ash pan during the off season. Failure to perform preventive maintenance may result in corrosion damaging the furnace resulting in possible severe property damage.

MAINTENANCE (Cont.)

BEGINNING OF SEASON

- **Chimney:** Remove cap from chimney. Inspect chimney. Ensure chimney is not blocked (check for animal or bird nests).
- **loading door:** Oil door hinges and latch. Inspect gaskets. Verify that door seals tightly (apply thin coat of lipstick to loading flange, shut door, reopen and inspect marking on the gasket).
- **Blower motor:** Place a few drops of S.A.E. 20 motor oil in each of the two oil cups.

WARNING

Use only **S.A.E. 20 motor oil** to lubricate the motor. Do not use universal household oils. Motor could be damaged, resulting in possible severe property damage.

- **Power:** Turn on power supply at the appropriate circuit breaker. Ensure that the pump is running..
- **Start-up:** Review start-up Procedures.
- **Safety:** Review all safety Precautions.
- **Housekeeping:** Verify that area is free of any **combustible materials**, gasoline and other flammable vapors and liquids or rags.

DANGER

Electrical shock hazard — Turn off power to the appliance before any service operation on the appliance except as noted otherwise in this instruction manual. Failure to turn off electrical power could result in electrical shock, causing severe personal injury or death.

TROUBLESHOOTING

1) PROBLEM: NOT ENOUGH HEAT OUT OF THE APPLIANCE.

- A) If the appliance reaches operating temperature (200°F) and draft fan shuts off, it is working properly. (If draft fan does not shut off, see Problem 4). Possibly, the appliance is undersized for the required heat load.
- B) Ensure that the joints in the hot air duct are tight.
- C) Check and clean the return air duct.
- D) Replace the air filter.
- E) Check for furniture blocking the cold air return vents.
- F) Verify that the fan limit control is properly set.
- G) Adjust the draft blower damper to allow more combustion air.
- H) Clean the fire box walls to improve heat transfer.
- I) Check for excessive ash buildup.
- J) Ensure that the air flow baffles (if used) are installed properly.
- K) The fuel quality might be poor. Split, seasoned, hardwoods are recommended.

Contact your installer or system designer for further resolution.

2) PROBLEM: EXCESSIVE CREOSOTE IS BUILDING UP IN ASH TROUGH.

- A) Ash build up above grates or in ash trough area will cause restrictions in combustion air.
- B) Verify that the fuel is properly seasoned (20-25% moisture content).
- C) Burning small pieces of extra dry wood can cause creosote. Try burning large pieces of wood for a few days.
- D) If problem persists call your installer or local ROYALL Representative.

TROUBLESHOOTING (Cont.)

3) PROBLEM: DRAFT BLOWER RUNS CONTINUOUSLY

- A) Set the thermostat at the lowest setting. The draft blower should stop if the room temperature is higher than the thermostat setting. If the draft blower is still running, go to step B.
- B) Disconnect the thermostat wires from the fan control center. If the draft blower stops, then either the thermostat or the thermostat wiring are defective.
- C) If the draft blower continues to run, replace the fan control center (the relay is probably stuck in the closed position.)

4) PROBLEM: DRAFT BLOWER DOES NOT OPERATE.

- A) Set the room thermostat above room temperature.
- B) Connect the "R" and "G" terminals on the transformer of the control center. If the blower runs, then either the thermostat or the thermostat wiring are defective.
- C) Connect the draft blower to an alternate power source. If the draft blower does not run, replace the draft blower.
- D) Re-connect the draft blower and install a jumper between "R" and "G" terminals on the control center transformer. Jumper the fan side (Left) of the fan limit control. If the draft blower runs, replace the fan limit control.
- E) If the draft blower still does not run after completing the preceding steps, then replace the fan control center.

TROUBLESHOOTING (Cont.)

5) PROBLEM: SMOKE “PUFFS” FROM THE UNIT


- A) Wood may be too wet or green. Try mixing woods.
- B) Check for obstructions in draft path (blower, chimney connector, chimney).
- C) A partially clogged chimney or exhaust plenum may be restricting air flow in the appliance.
- D) A buildup of ashes in the ash trough can restrict the exhaust of combustion air.
- E) A buildup of ashes on top of the grates can restrict combustion air.
- F) Ensure that the chimney has adequate draft (.06” w.c. minimum).
- G) Ensure that no other appliances are connected to the chimney.
- H) A “cold” chimney could force cooler exhaust gases back into the furnace. Verify that the chimney is properly installed and insulated.
- I) Check for possible chimney “down draft” from taller surrounding trees, buildings or objects. It might be possible to correct with a chimney cap.

6) PROBLEM: EXCESSIVE SMOKE OR FLAMES COMING OUT OF LOADING DOOR DURING REFUELING


- A) Fully open the smoke damper rod prior to opening the fuel loading door.
- B) Open fuel door 1/2”, then wait 30 seconds for draft to increase prior to fully opening the door (SLOWLY).
- C) Chimney could have insufficient draft:
 - 1. Ensure that chimney draft is .06” w.c. or greater.
 - 2. Check length of flue pipe to chimney. The appliance should be located within 6 feet of the chimney.
 - 3. Ensure that the chimney cap is not too close to the top of the chimney, restricting air flow.
 - 4. Clean chimney and chimney connector.
 - 5. Raise chimney height to increase draft.

REPLACEMENT PARTS

FIRE BOX

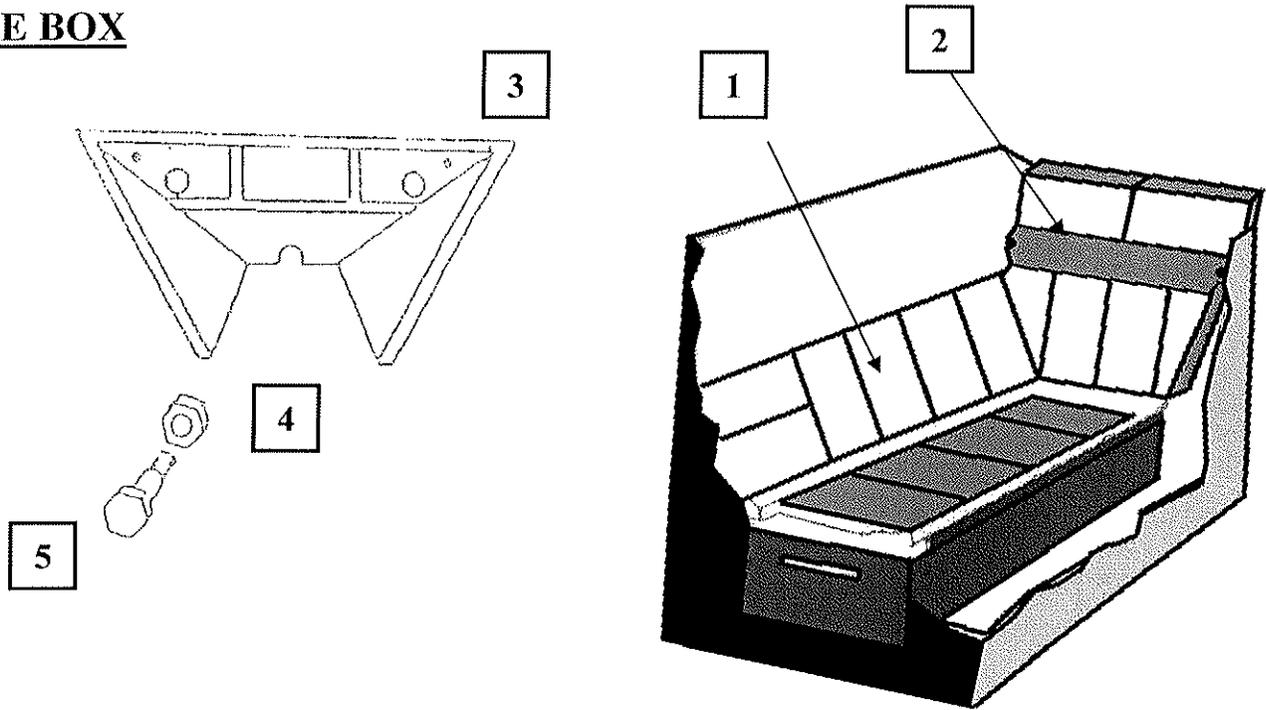


GRATE ASSEMBLY

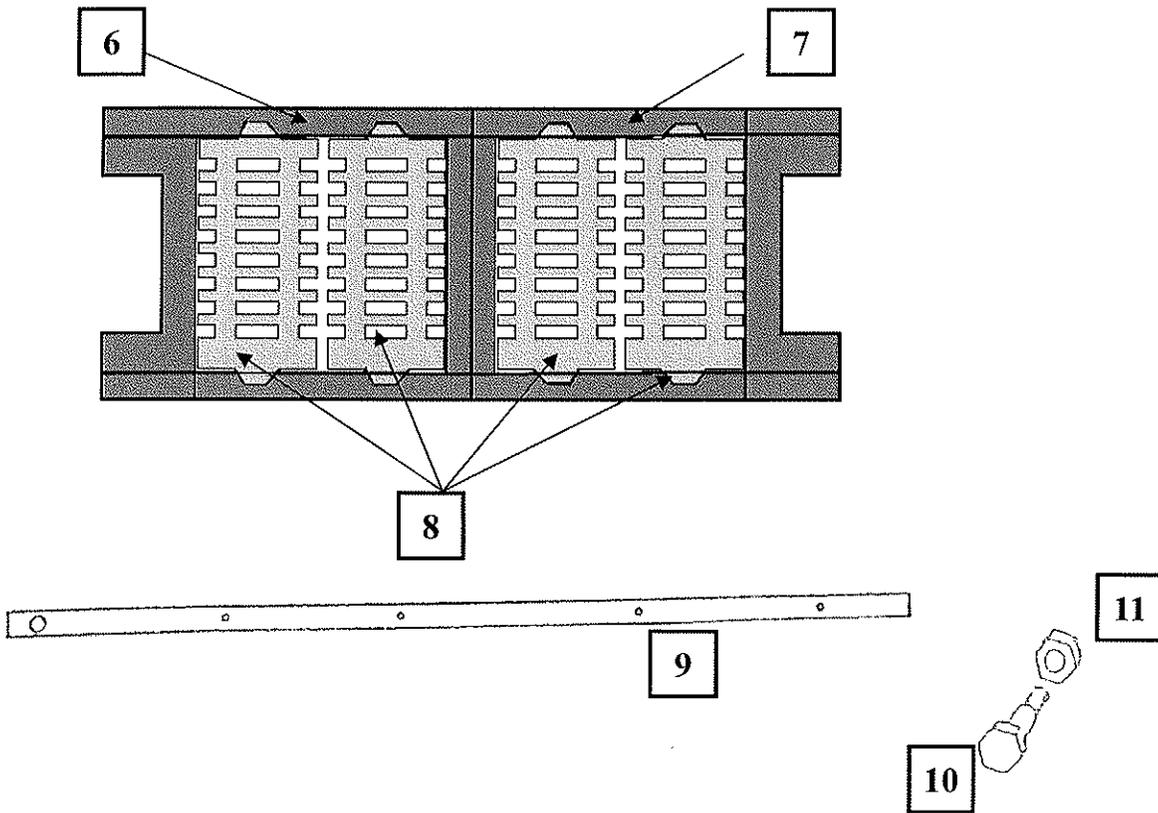


REPLACEMENT PARTS (Cont.)

S-HOOK AND SHAKER GRATE HANDLE

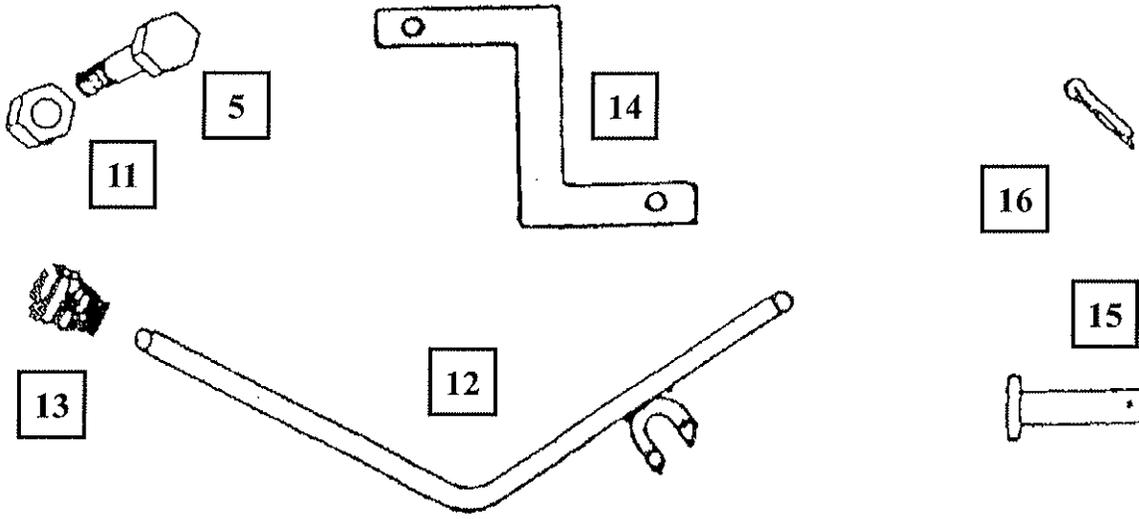


DAMPER ROD ASSEMBLY

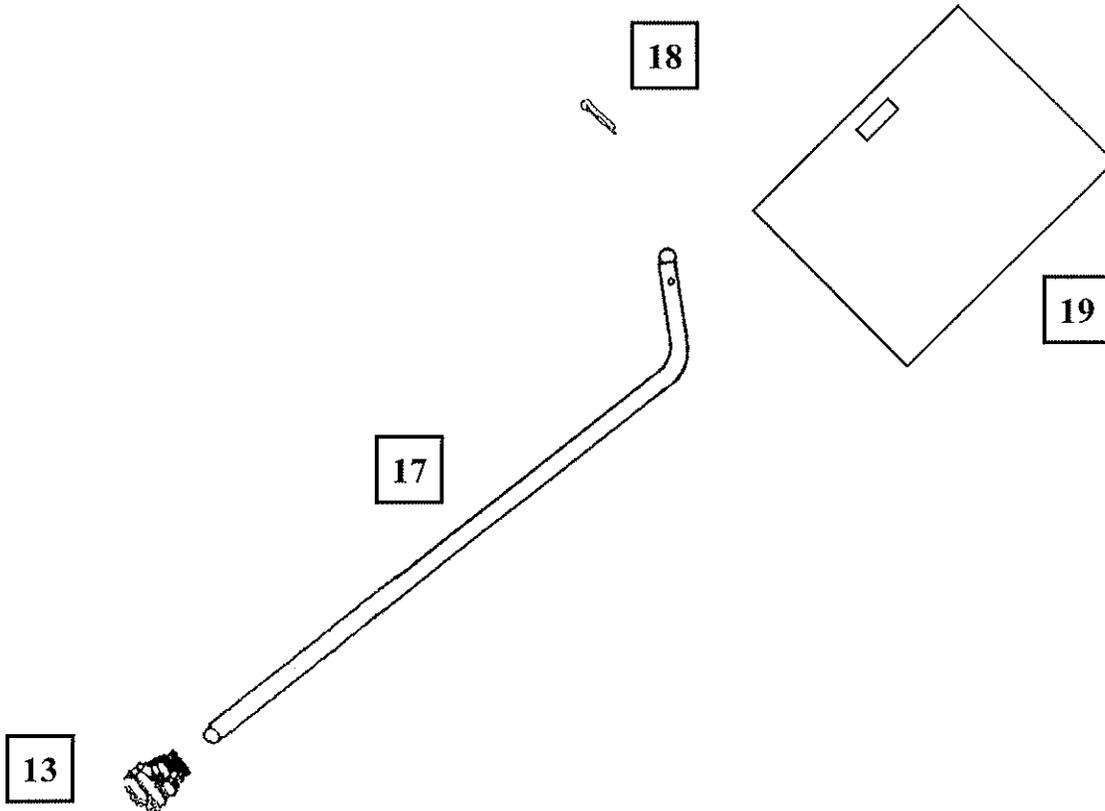


REPLACEMENT PARTS (Cont.)

SHROUDS AND DOORS

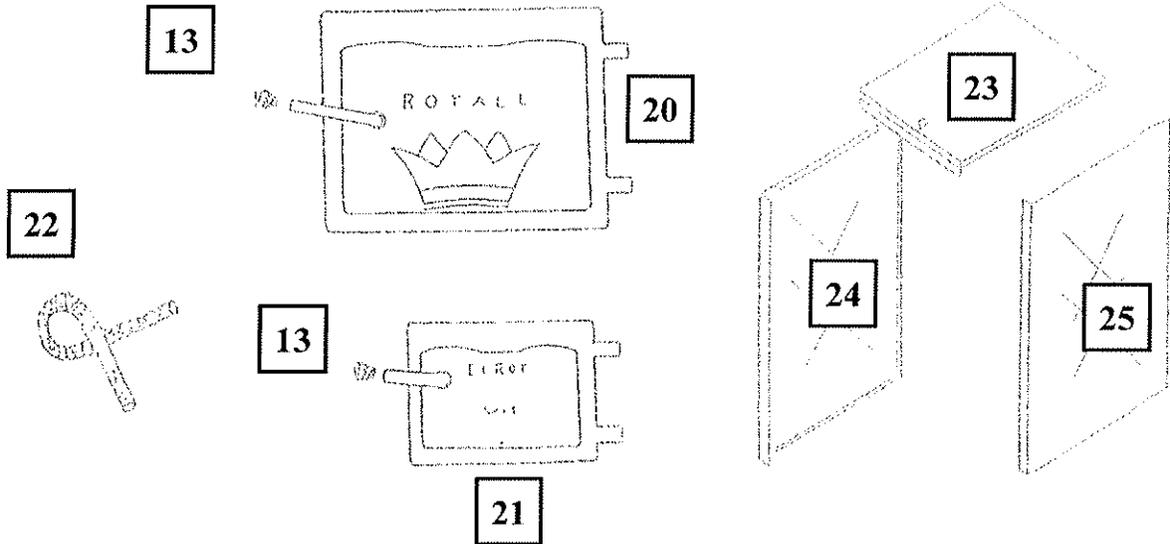

COMPONENTS

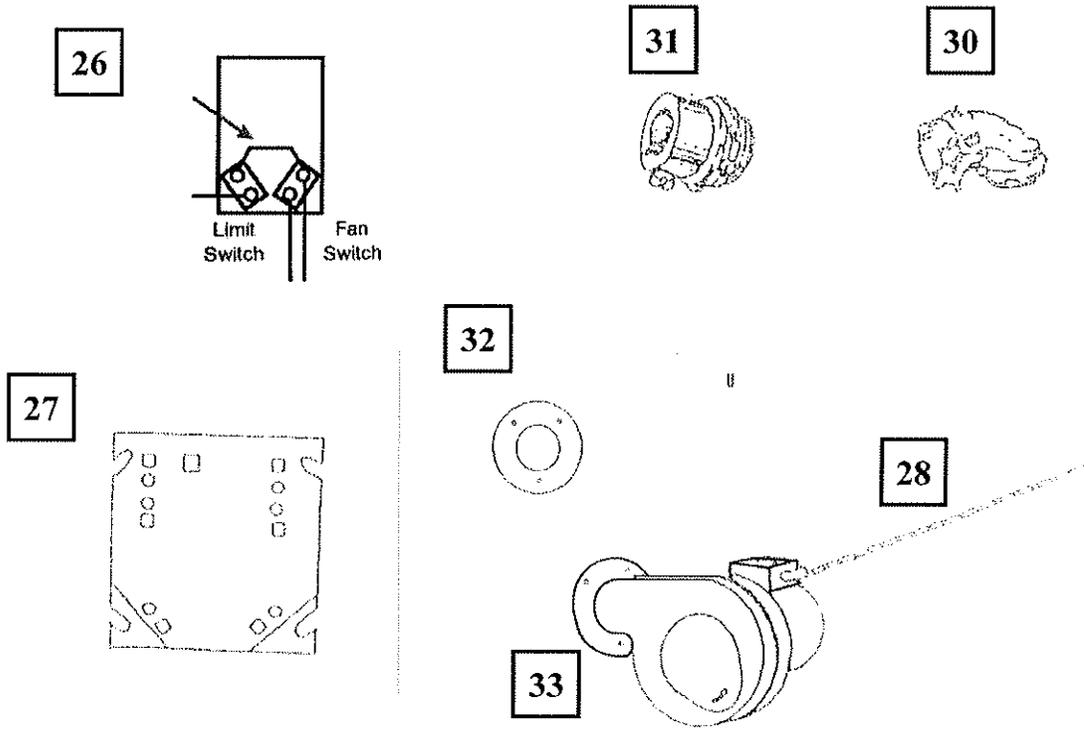

REPLACEMENT PARTS LISTING

P/N	Unit	Req'd	Description
1	M000103	All	16 Full 2 Half Fire Brick, 9" x 4-1/2" x 1-1/2"
2	C805108	All	1 T-Bar
3	C865103	All	1 Front Baffle, Cast Iron
4	F037500 25	All 4	Hex Nut, 3/8"
5	F037500 16	All	2 HC Bolt, 3/8" x 1-1/2"
6	C865102	All	1 Grate Frame, CI, Front
7	C865103	All	1 Grate Frame, CI, Back
8	C865101	8095 4	Rocker Grate, Cast Iron
		8150 6	
9	M860013	All	1 Rocker Bar
10	F025000 02	All	1 per Grate Hex Head Bolt, 1/4" - 20 x 1-1/2"
11	F025000 25	All	1 per Grate Hex Head Lock Nut, 1/2" - 20
12	H865113	All	1 Shaker Grate Handle
13	H865103	All	1 per Handle Wire Spring Handle, Silver
14	C865105	All	1 S-Hook
15	F250001 5	All	1 Hinge Pin, 1/2" x 1-3/4"
16	F006259 06	All 1	Cotter Pin, SS, 1/16" x 1/4"
17	M860018	095	1 Damper Rod
	M815018	150	
18	F018750 05	All 1	Cotter Pin, 3/16" x 2-1/2"
19	M860017	095	1 Damper Plate
	M815047	150	
20	C865107	All	1 Fuel Loading Door, Cast Iron
21	C865106	All	1 Ash Door, Cast Iron

P/N	Unit	Req'd	Description
22	G865115	All	Varies Rope Gasket
23	S809501	80 95	1 Shroud, Top
	S815001	81 50	
24	S809502	80 95	1 Shroud, Right Side
	S815002	81 50	
25	S809503	80 95	1 Shroud, Left
	S815003	81 50	
26	E805121	All 1	1 Fan Limit Control
27	E805122	All 1	1 Control Center
28	E805024	All	1 BX Wire, 14/3, 53"
29	E865103	All	1 BX Wire, 14/2, 62"
30	E860106	All	1 BX Connector, 90 deg
31	E865105	All	3 BX Connector, Straight
32	E860107	All 1	1 Draft Blower Gasket
33	E860108	All 1	1 Draft Blower, Dayton 1TDN7, 50 cfm

OPTIONAL PARTS

P/N	Unit	Req'd	Description
	All	1	Filter Box
	All	1	Circulation Blower

NOT SHOWN

P/N	Unit	Req'd	Description

Warranty On ROYALL Solid Fuel Appliances

ROYALL Solid Fuel Appliances are warranted by **ARK ALLOY LLC** to the original user against defects in workmanship under normal use, from the date of purchase.

This warranty is subject to the condition that the ROYALL Product(s) must have been installed in accordance with manufacturers' instructions. The Purchaser's warranty registration card must be on file at ROYALL to qualify for warranty. This warranty is extended only to the first retail purchaser of the product and only to a product that has not been moved from its original installation site. Any warranty claims on wood burning appliances or component parts should be reported to the ROYALL dealer from whom the product(s) were purchased.

Steel Components and workmanship:

0-24 months from date of purchase Owner pays \$0

25-36 months from date of purchase Owner pays \$250.00

37-48 months from date of purchase Owner pays \$375.00

49-60 months from date of purchase Owner pays \$500.00

After the 60th month, the warranty will follow a pro-rated schedule. The percentage applies toward manufacturer's authorization of warranty work or may be applied toward the purchase of a new ROYALL wood burning appliance.

61-72 months from date of purchase 50%

73-84 months from date of purchase 40%

85-96 months from date of purchase 30 %

97-108 months from date of purchase 20%

109-240 months from date of purchase 10%

Cast Iron Components: 0-12 months from date of purchase 100%

Component Parts: fans, baffles, pumps, aquastats, relays, gauges, relief valves, expansion tanks, heat exchangers, etc. are warranted by their manufacturers. In addition, **ARK ALLOY** warrants the original factory installed components for 1 year from date of purchase.

In addition to the warranty above, the **ARK ALLOY** warranty does not cover:

1. Components that are part of the heating system (products) but were not furnished by ROYALL as a part of the heating system (products).
2. The workmanship of any installer of ROYALL product(s). In addition, this warranty does not assume any liability of any nature for unsatisfactory performance caused by improper installation.
3. Any costs for labor for removal and reinstallation of the alleged defective stove or part, transportation to **ARK ALLOY**, if necessary, and any other materials necessary to perform the exchange.
4. Any products that have a failure or malfunction resulting from improper or negligent operation, accident, abuse, freezing, over temping, poor water quality, misuse, unauthorized alteration or improper repair or maintenance. Improper adjustments, control settings, care or maintenance. Information is in the installation manual and other printed/technical information provided with the product or direct from **ARK ALLOY**.

NOTE: THE WARRANTY DESCRIBED HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY. ROYALL EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, INDIRECT OR PUNITIVE DAMAGES FOR BREACH OF ANY EXPRESS WARRANTY. For prompt product warranty claims, notify the ROYALL dealer from whom the product was purchased. If this action does not result in warranty resolution, contact ARK ALLOY 325 SOUTH PARK ST, REEDSBURG WI 53959 (800-944-2516), with details in support of the warranty claim. Alleged defective part(s) must be returned through the same dealer channel in accordance with the **ARK ALLOY** procedure currently in force for handling returned goods for the purpose of inspection to determine cause of failure. **ARK ALLOY** will furnish new part(s) to an authorized ROYALL dealer who, in turn will furnish the new part(s) to the purchaser. If there are any questions about the coverage of this warranty, contact ROYALL at the address above.

Owner's registration card must be completed and returned to ARK ALLOY within 30 days from purchase for warranty to be in effect.