## **Installation Guidelines**

### **APPLICATIONS**

Model RV Gas Vent is UL Listed for venting Natural or LP gas burning natural draft appliances, including water heaters, furnaces, space heaters and fireplaces.

DO NOT USE for venting a direct-vent gas appliance.

DO NOT USE for venting appliances burning other fuels (wood, pellets, corn, oil, etc.).

#### **MATERIALS**

Inner Liner – aluminum
Outer Casing – galvanized steel
¼" air space insulation

### **INSTALLATION MINIMUMS**

- Proper termination height is shown in the Termination Table. This table may be followed provided the vent is not less than 8' from any vertical wall or similar obstruction.
- If vent is within 8' of a wall or obstruction, the vent needs to terminate at least 2' higher than any part of the building within 10'.
- Minimum clearance to combustible materials is 1".

## MINIMUM GAS VENT HEIGHT


A minimum gas vent height of 5' above the appliance draft hood is required. Where the



vent has an offset, or serves multiple appliances, greater heights may be required for proper venting. Special care must be taken with short gas vent furnaces, unit heaters, and furnaces in attics to assure they have sufficient vent height to assure complete venting. Refer to appliance manufacturer instructions and local codes for required minimum heights.

## **TERMINATION TABLE**

Minimum Height from Roof to Lowest Discharge

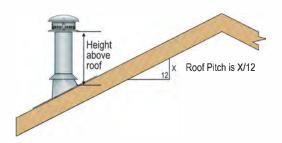

Roof Pitch	Minimum Height above Roof
Flat to 7/12	1.0 ft
Over 7/12 to 8/12	1.5 ft
Over 8/12 to 9/12	2.0 ft
Over 9/12 to 10/12	2.5 ft
Over 10/12 to 11/12	3.25 ft
Over 11/12 to 12/12	4.0 ft
Over 12/12 to 14/12	5.0 ft
Over 14/12 to 16/12	6.0 ft
Over 16/12 to 18/12	7.0 ft
Over 18/12 to 20/12	7.5 ft
Over 20/12 to 21/12	8.0 ft

## DO NOT CUT GAS VENT PIPE

Adjustable Lengths are telescoped over fixed lengths to accommodate odd distances between vent lengths or connectors.

Selkirk Type "B" Gas Vent features an advanced engineering design and premium quality material which allows us to offer a Lifetime Warranty on all component parts.



### TYPE "B" GAS VENT LOCKTAB

Our LOCKTAB feature was developed in response to customer feedback concerning the use of sheet metal screws to secure GAS VENT sections. In many areas, the use of sheet metal screws is either a commonly accepted practice or a local requirement. The use of ¼" sheet metal screws is expensive and time-consuming for installers. The use of our new LOCKTAB feature gives installers the option of engaging this tab instead of using sheet metal screws.

 
#### To use the LOCKTAB feature:



 Assemble RV GAS VENT sections by pushing together until they "snap".



 The LOCKTAB is then depressed with a thumb or blunt object, such as a screwdriver, into the lock channel of the male end of the pipe.



 To disengage the LOCKTAB, pry it up by using a screwdriver or similar.

## 从SELKIRK. -

Selkirk Corporation 5030 Corporate Exchange Blvd. Grand Rapids, MI 49512 Toll Free: 1.800.433.6341 Selkirk Canada Corporation 950 5 outh 5 ervice Road,, 2nd Floor 5 toney Creek, ON L8E 6A2 Toll Free: 1.888.SELKIRK (735.5475)

selkirkcorp.com



# **₩SELKIRK**

# Type "B" Gas Vent Buyer's Guide

Model RV

for Venting Gas Water Heaters and Furnaces



## FEATURES

- · Snap together non-positional lock system
- · Die-formed ends
- LockTab® An alternative method to secure pipe when required by local code
- · Lifetime warranty




IOCK

## Type "B" Gas Vent Buyer's Guide - Model RV

**GETTING STARTED** Select type of installation by determining where your Venting will run.

Before beginning your installation, be sure that the overall height and Gas Vent size conform to building code requirements. Use Selkirk Gas Vent and Chimney Sizing Handbook or Fuel Gas Codes to select the correct Gas Vent diameter. Avoid using a larger than necessary vent diameter.

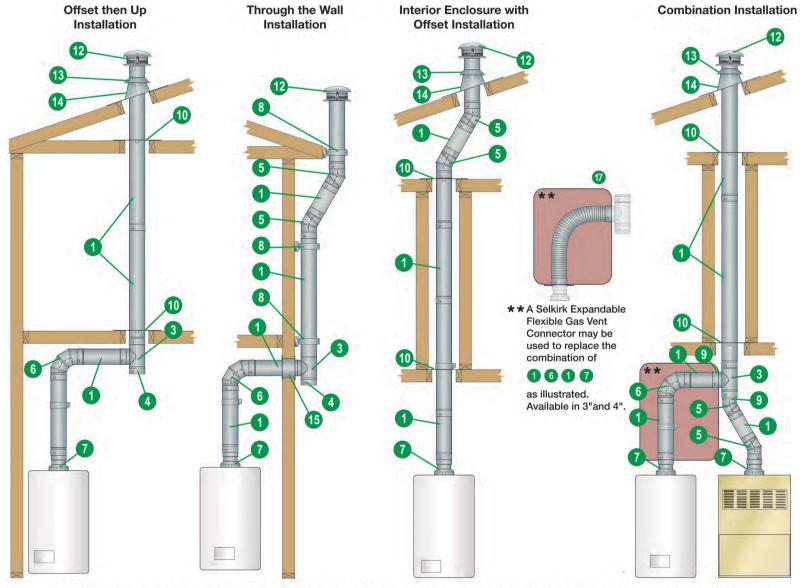

NOTE: Remember to refer to our Installation Guidelines found on the other side of this Buyer's Guide, and our complete set of instructions on www.selkirkcorp.com.

Installations may vary, please refer to the full catalog and installation instructions at selkirkcorp.com or call 1.800.433.6341 for technical assistance.



### **INSTALLATION PLANNING WORKSHEET**

NSTALLATION PLANNING	WUKKSHE	El		· · · · · · · · · · · · · · · · · · ·
All parts available in 3"-8" diamet	ters – Asterisk "*'	in Part # repr	esents Diame	ter required.
Gas Vent Lengths	rail#	Frice	Gty	iotai
60" Length	10*060	\$	X	= \$
36" Length	10*036	\$	X	= \$
24" Length	10*024	\$	X	=\$
18" Length	10*018	\$	X	= \$
12" Adjustable Length				
(Adjusts from 3.5" to 10.5")	10*082	\$	X	= \$
18" Adjustable Length (Adjusts from 6" to 16")	10*094	¢	v	¢
	10"084	Ф	X	= ⊅
Universal Adapters Universal Adapter Female	10*090	¢	V	¢.
Universal Adapter Male				
Tee				
Tee Cap				The state of the s
45°/60° Adjustable Elbow 3" - 6"				
45° Adjustable Elbow 7" - 8"				
90° Adjustable Elbow				
Draft Hood Connector  Wall Support Band Assembly				
	10 430	Ф	^	= ⊅
Increasers and Reducers 3"- 4" Increaser	102204	¢	v	_ ¢
4"- 5" Increaser		22777777		minutes selve
4"-5" Double Wall Increaser				
5"-6" Increaser				
4"-3" Reducer				
Support Assembly (Firestop)				
Pipe Collar (Firestop)				
2 Rain Cap				
Storm Collar				
Adj. Roof Flashing 1/12-6/12				
5 Wall Thimble (Firestop)				
Termination Kit - Available in 3				
12 Rain Cap (13 Storm Collar (1		hing 🕢 Draft	Hood Conne	ector
Train oap B Storm Collar		\$		
EFC Flexible Gas Vent Connecto		Ψ		Ψ
3" (1-3') Connector		S	Y	- \$
3" (2-5') Connector				
4" (1-3') Connector				The state of the s
4" (2-5') Connector				
+ (2-0) OUTHOULUL	177001	Ψ		φ _