



# Installation Instructions (USA & Canada)



## Factory Built Double Wall Chimney Connector

The Ultimate connection between your  
Woodstove and the Insulated Chimney

# MODEL USP



**Intertek**

LISTED  
W/N 23367  
Report Number: GG104935831

Tested to Standards

CAN/ULC-S641  
&  
UL 103 Type HT

**CONTENTS**

CERTIFICATION LABEL . . . . . 3

TYPE OF APPLIANCES AND PRE-INSTALLATION GUIDELINES . . . . . 4-5

SECURING OF PIPE AND FINISHING BAND..... 5-6

STOVE ADAPTERS, INSTALLATION PROCEDURES . . . . . 6

MASONRY, STRAIGHT INSTALLATIONS. . . . . 7-8

CLEANOUT, THROUGH THE WALL INSTALLATIONS . . . . . 8-9

IN-LINE DAMPER, INCREASER, REDUCER, PROBE THERMOMETER..... 9

SAFE OPERATION AND MAINTENANCE . . . . . 10

CHIMNEY FIRES AND PARTS CHECK LIST . . . . . 10-12

OFFSET CHARTS . . . . . 13-14

WARRANTY . . . . . 15

**A MAJOR CAUSE OF CHIMNEY CONNECTOR RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. CHECK WITH THE APPLIANCE MANUFACTURER FOR CLEARANCE REQUIREMENTS.**

**IT IS OF THE UTMOST IMPORTANCE THAT THIS DOUBLE WALL CHIMNEY CONNECTOR BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS. IF YOU ARE UNSURE OF INSTALLATION REQUIREMENTS, CALL THE PHONE NUMBER LISTED ON THESE INSTRUCTIONS.**

**IMPORTANT:**

Read through all of these instructions before beginning your installation. Failure to install this product in accordance with these instructions will void the manufacturer’s warranty, conditions of certification, and may affect your homeowner’s insurance and safety listing of your appliance.

**APPLICATION**

These instructions apply to Model USP Factory Built Chimney Connector system. Your Chimney Connector is intended to connect a gas, liquid or solid fuel appliance normally producing flue gases of 650°C / 1200°F (Canada), 1000°F / 540°C (USA - to the temperature requirements of UL 103 Type HT) or less to a factory built or masonry chimney.

*Installer: It is of the utmost importance these instructions are left with the homeowner.*

*Homeowner: Keep these instructions in a safe place for future reference.*

Selkirk Corporation  
 4460 44th Street S.E., Suite F  
 Grand Rapids, MI 49512 Toll  
 Free: 1.800.992.VENT (8368)  
 info@selkirkcorp.com  
 www.selkirkcorp.com



Selkirk Canada  
 P.O. Box 526, Depot 1,  
 Hamilton, ON L8L 7X6  
 Toll Free: 1.888.SELKIRK (735.5475)  
 cscanada@selkirkcorp.com  
 www.selkirkcorp.ca

## CERTIFICATION LABEL

 W/N 23367	<b>LISTED CHIMNEY CONNECTOR</b> <b>RACCORD DE CHEMINÉE HOMOLOGUÉ</b> TYPE HT	
	CERTIFIED TO : UL 103 & CAN / ULC - S641 - HOMOLOGUÉ SELON UL 103 & CAN / ULC - S641 REFER TO THE INTERTEK DIRECTORY OF BUILDING PRODUCTS FOR DETAILED INFORMATION - SE RÉFÉRER AU RÉPERTOIRE D'INTERTEK POUR PLUS D'INFORMATION ( <a href="https://bpdirectory.intertek.com">HTTPS://BPDIRECTORY.INTERTEK.COM</a> [BPDIRECTORY.INTERTEK.COM])	
<b>MODEL / MODÈLE</b>	<b>USP</b>	
FOR CONNECTION BETWEEN CHIMNEYS AND SOLID FUEL, LIQUID FUEL, AND GAS FIRED APPLIANCES NORMALLY PRODUCING FLUE GASES OF 650°C (1200°F) OR LESS.	POUR RACORDEMENT ENTRE DES CHEMINÉES ET APPAREILS CONSOMMANT DES COMBUSTIBLES SOLIDES, LIQUIDES, OU GAZ PRODUISANT NORMALEMENT DES GAZ DE CHEMINÉE DE 650°C (1200°F) OU MOINS.	
<b>MINIMUM CLEARANCE TO COMBUSTIBLES</b> <b>6 INCHES / 150MM</b>	<b>ESPACEMENT MINIMUM DES MATÉRIAUX COMBUSTIBLES</b> <b>6 POUÇES / 150MM</b>	
<b>CAUTION:</b> DO NOT ENCLOSE THIS CHIMNEY CONNECTOR MUST NOT PASS THROUGH COMBUSTIBLE WALLS, FLOORS OR CEILINGS. FOLLOW MANUFACTURERS INSTALLATION INSTRUCTIONS PACKAGED WITH TELESCOPING AND ADJUSTABLE PIPE SECTIONS.	<b>MISE EN GARDE:</b> NE PAS ENFERMER CE TUYAU DE RACCORDEMENT NE DOIT PAS TRAVERSER DES MURS, PLANCHERS OU PLAFONDS COMBUSTIBLES. SUIVRE LES INSTRUCTIONS D'INSTALLATION DU FABRICANT AJOUTÉES DANS LES EMBALLAGES DES SECTIONS TÉLESCOPIQUES ET AJUSTABLES.	
<b>LV</b> MADE IN CANADA FABRIQUÉ AU CANADA	<b>SELKIRK CORPORATION</b> GRAND RAPIDS, MI	<b>NP372</b> REV.0

### ATTENTION!

It is important these installation instructions are followed.

We recommend our hearth products be installed and serviced by professionals who are certified in Canada by WETT (Wood Energy Technology Transfer) or l'APC (l'association des professionnels du chauffage) or in the U.S.A. by NFI (National Fireplace Institute).

### WARNING

Failure to follow the installation instructions could cause **FIRE, CARBON MONOXIDE POISONING, OR DEATH**. If you are unsure of installation requirements, call the Phone Number listed on the instructions or visit [www.selkirkcorp.com](http://www.selkirkcorp.com).

### TYPES OF APPLIANCES

Your Chimney Connector is intended to connect a gas, liquid, or solid fuel appliance normally producing flue gases of 650°C / 1200°F (Canada), 1000°F / 540°C (U.S.A.) or less to a factory built or masonry chimney. If you are planning to install a wood stove, we recommend that you:

- Use this chimney connector only with an appliance listed by a recognized Testing Laboratory (such as ULC, WH, ITS, UL or OMNI).
- Choose the right size stove. Do not buy one larger than you need.
- Connect only one appliance to a chimney.

**For mobile home installations follow the installation instructions for the mobile home appliance and use the chimney connector clearance required by the appliance.**

### PRE-INSTALLATION GUIDELINES

This Chimney Connector must not be enclosed or pass through attics, closets, floors or ceilings, and must not be used in place of an insulated chimney section.

Plan the installation of your appliance and chimney connector in such a way that your chimney connector run is as short and straight as possible.

By having too long and/or multiple bend installations you can reduce system draft which can affect the operation, and/or performance of your appliance and/or chimney system.

The use of two 45° elbows is often preferable to a single 90° elbow.

Model USP warranty coverage will be null and void, and serious fire, health, or other safety hazards may result from any of the following actions:

- Installation of any damaged Chimney Connector;
- Unauthorized modifications of the Chimney Connector;
- Installation of any component part not manufactured or approved with Model USP.
- Installation other than as instructed in the installation instructions and the appliance manufacturer's instructions.

Ensure you obtain any necessary building permits, and your installation will conform with all federal and municipal building code requirements.

The **Minimum Clearance** to combustibles (i.e. walls, ceilings, etc.) is **6" (152mm)**.

We recommend the **maximum vertical run** of Double Wall Stove Pipe should **not exceed 20ft.**

CONTACT LOCAL BUILDING OR FIRE OFFICIALS ABOUT RESTRICTIONS AND INSTALLATION INSPECTIONS

Ensure the Wide Finishing Band covers any single wall portion of the Pipe Adapter/Flue Extension to provide 6" clearance.

Provide sufficient slope in the horizontal run of the chimney connector (1/4" per foot, 20mm per meter) to enable any condensed liquid or creosote to run back toward the appliance.

When pipe is correctly placed and aligned, all joints between sections of the chimney connector must be secured with three sheet metal screws per joints (#8 x 3/8" - supplied). Some drilling may be required to the Stove Pipe Adapter with a 3/32" metal drill bit.

If you are upgrading from a single wall stove pipe to USP Double Wall Chimney Connector, have your chimney inspected by a certified wood technician or a certified chimney sweep.

Joint overlap of the USP Chimney Connector Lengths and Fittings is 1-3/8" (i.e.: 36" Length is 34-5/8").

Use only authorized USP parts. Do not mix with single wall stove pipe. Do not mix with other product or improvise solutions. Do not install damaged parts.

After the installation has been inspected, you can remove the labels from the USP. For future reference, apply the labels to a blank or back page of the instructions. Remove any remaining glue residue, then clean the entire USP to remove finger prints, oil or dust prior to burning the appliance.

**NOTE:** It is not unusual for the USP Chimney Connector to give off some odor and some smoke the first few times it is burned. This is normal due to the curing of the finish and any residual oil from the manufacturing process. This will disappear after a few uses of the appliance. Please ensure the room is well ventilated, open all windows. It is recommended you burn your appliance for at least six (6) continuous hours the first time you use it.

The black surface of the chimney connector may be touched up as required. We recommend Stove Bright Metallic Black #6309. Follow the paint manufacturer's installation instructions for best results.

### **SECURING USP DOUBLE WALL STOVEPIPE TO THE CHIMNEY**

A USP Length (fixed, Telescopic, Adjustable) will slide over the Stovepipe/Smoke Pipe Adapter (ASE, CPA, SPA) or Flue Extension. The following pages are to assist in a smooth transition of the USP to the chimney system.

A Wide Finishing Band (WFB) will conceal the joint between the USP and the connection at the Pipe Adapter or Flue Extension. Ensure the Wide Finishing Band covers any single wall portion of the Pipe Adapter/Flue Extension so the 6" clearance can be maintained. Once in the right position, secure in place with the supplied nut and bolt.

**NOTE:** The Wide Finishing Band is included with the Telescopic Length (TL).

### **WIDE FINISHING BAND (WFB)**

1. Position the Telescopic or a Fixed Length over the Pipe Adapter/Flue Extension. Ensure the final position will be covered by the Wide Finishing Band (3-1/2" wide). The Wide Finishing Band must overlap the male end of the USP pipe all the way flush to the ceiling support, Basecap or the beveled portion of the Pipe Adapter (ASE).

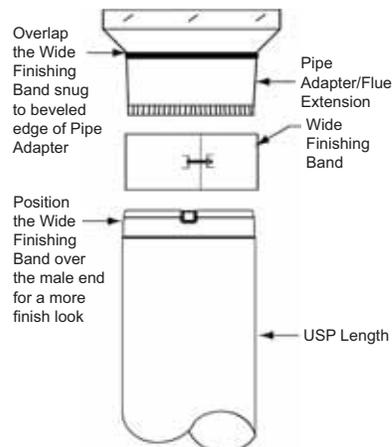


Figure 1A - Pipe Adapter with beveled edge

2. Secure the USP pipe to the Pipe Adapter/Flue Extension with the 3 metal screws (supplied).

3. Wrap the Wide Finishing Band over the dimpled male end of the USP pipe and the Pipe Adapter/Flue Extension. Ensure it is over the bead and snug to the beveled edge of the ASE or the Basecap. Secure the Wide Finishing Band in place with the supplied nut and bolt. See Figures 1A-1B.

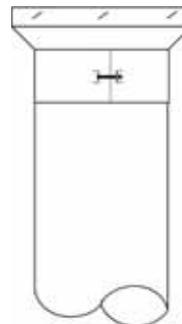


Figure 1B - USP & Pipe Adapter Assembled

4. On a through-the-wall installation with a 90° elbow, it may be necessary to cut the Pipe Adapter/Flue Extension and/or the Wide Finishing Band to the required width to be covered. Secure the USP pipe to the Pipe Adapter/Flue Extension with the 3 metal screws (supplied). Ensure the Wide Finishing Band overlaps the male end of the USP pipe and overlaps snug to the beveled edge of the ASE. See Figure 2A.


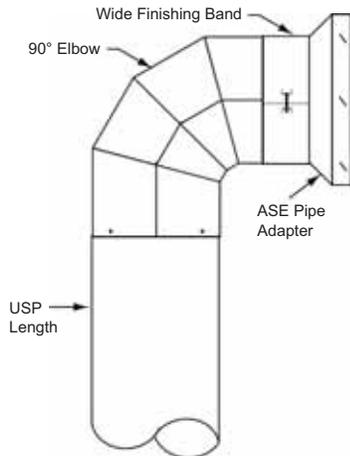


Figure 2A - With 90° Elbow Assembly

**ATTENTION!**

The orientation of all USP Chimney Connector components must be with the dimpled male end (outer pipe) pointing up, towards the chimney and the female end with pilot holes toward the appliance. See diagram below.

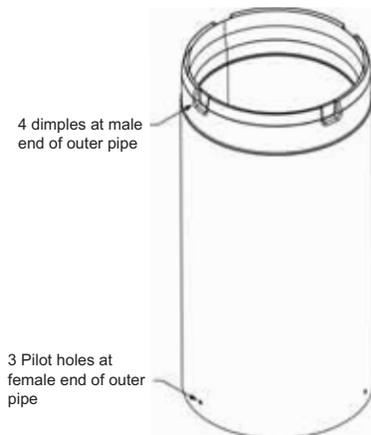

6

Note: Diagrams & Illustrations Are Not to Scale.

**STOVE ADAPTERS (LPSA-AL6-SAJOTUL)**

The Low-Profile Stove Adapter (LPSA) can be used with cast iron flue collars or on a stove with a flush outlet. Can also be used with stoves with irregular shaped or sized flue collars.

Some stove flue outlets are too thick for the Telescopic Length to fit over. In these cases, the Adjustable Length/Stove Adapter (AL6) or other Adjustable Lengths can be used. If necessary, the inner flue casing can be crimped as required to fit within the stove outlet collar.

The Jotul Stove Adapter (SAJOTUL) has a longer inner sleeve for a perfect fit with some 6" Jotul stoves. Secure to the stove flue outlet with 3/4" screws (supplied by others).

See Figure 3 below for each of the above mentioned Adapters.



**INSTALLATION PROCEDURES**

Install the appliance and chimney system according to the installation instructions provided with them, ensuring the required clearances are maintained.

### MASONRY CHIMNEY (See Figure A)

Have your masonry chimney inspected by a qualified chimney sweep or Fire Department Inspector before using it. Masonry chimney should only be used if they are in good condition and have been built to the National Building Code.

When required, the masonry can be relined with a stainless steel liner or other approved relining products. If the existing masonry chimney is suitable, make sure the liner and opening are the correct size to accept the Masonry Adapter (MA). See image under Parts List, page 12. Fit the Masonry Adaptor into this opening and over the branch of the Liner Tee until the collar of the Adapter fits flush to the wall of the masonry chimney. If the Adapter is too long and the collar does not fit flush to the wall, or it projects too far on the Tee, the Adapter needs to be trimmed for a proper fit. Attach the adaptor collar to the masonry wall using screws and masonry anchors. Seal the joint between the collar and the masonry with a high temperature silicone caulking.

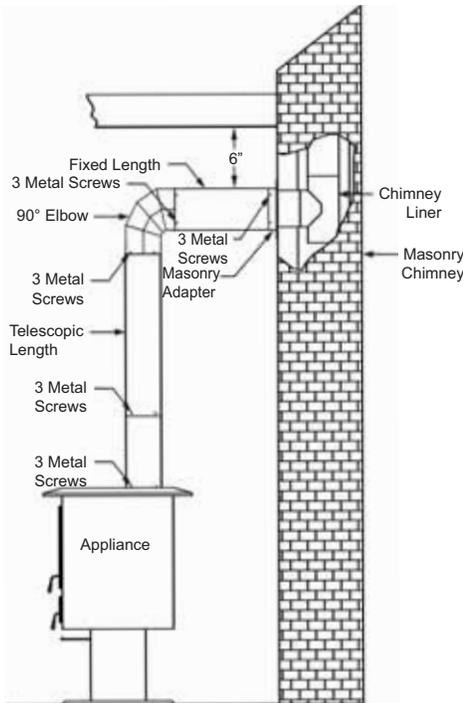


Figure A - Masonry Chimney

### STRAIGHT INSTALLATION (See Figure B)

This installation is used when the insulated chimney system is located immediately above the appliance. Most installation will require just a Telescopic Length which adjusts from 35-3/4" to 68-1/2" when assembled. The Telescopic Length includes a lower fixed 36" Length, an upper 36" Adjustable Length and a Wide Finishing Band. See images under Parts List, page 12.

1. Place the Telescopic Length on top of the appliance so the female end sits over the flue collar of the appliance. In most cases the outer casing will rest on the stove top. Secure in place through the outer casing into the flue collar using 3 metal screws provided.
2. Extend the Telescopic Length up to the chimney and fit it snugly over the Pipe Adapter/Flue Extension. Secure in place with 3 metal screws provided. Secure the bottom and top of the Telescopic Length together once you reach the necessary length. If the installation requires more length than provided by the Telescopic Length, add fixed length(s) on the appliance and the Telescopic Length next to the chimney.

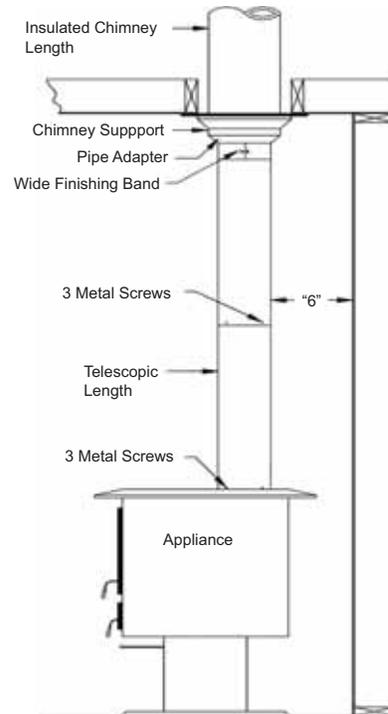


Figure B - Straight Up

All joints are to be fastened together with the 3 metal screws provided with each length. Install the Wide Finishing Band (see page 5).

NOTE: Some stoves flue collars are too thick for the Telescopic Length to fit over. In these cases, a Stove Adapter may be more suitable (see Stove Adapters on page 6). If necessary, the inner flue casing can be crimped as required to fit within the flue collar.

**CLEANOUT INSTALLATION (See Figure C)**

This installation, utilizing a Tee Section (T), is used when the insulated chimney system is offset from the appliance, either to maintain proper clearances for the appliance or for incorporating a cleanout in the chimney system.

1. Place the Telescopic Length on top of the appliance so the female end sits over the flue collar of the appliance. In most cases the outer casing will rest on the stove top. Secure in place through the outer casing into the flue collar using 3 metal screws provided. If the stove flue collar is too thick for the Telescopic Length to fit over, you will need to use a Stove Adapter on top of the stove before installing the Telescopic Length. See Stove Adapters on page 6.

2. Install the 90° Elbow (E90) to the Tee Section (T) branch. Secure in place with 3 metal screws provided.

3. Install the assembly (90° Elbow and Tee Section) to the top of the Telescopic Length and secure the sections together with 3 metal screws.

4. Extend the Telescopic Length with the 90° Elbow and Tee Section up to the chimney and fit the Tee Section snugly over the Pipe Adapter/Flue Extension. Secure in place with 3 metal screws provided. Secure the bottom and top of the Telescopic Length together once you reach the necessary length. If the installation requires more length than provided by the Telescopic Length then add fixed length(s) on the appliance and the Telescopic Length next to the 90° Elbow. All joints are to be fastened together with the 3 metal screws provided with each length. Install the Wide Finishing Band ( see pages 5 - 6). See images under Parts List on page 12.

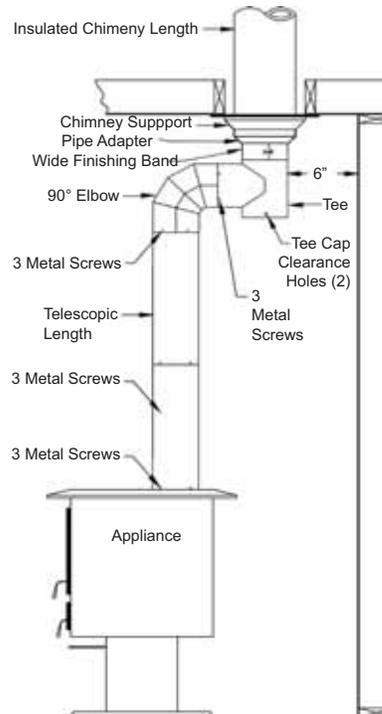


Figure C - Straight Up with Cleanout Tee Section

**THROUGH THE WALL INSTALLATION (See Figure D)**

This installation is used when the insulated chimney system is located through the wall behind the appliance.

1. Place the Telescopic Length on top of the appliance so the female end sits over the flue collar of the appliance. In most cases the outer casing will rest on the stove top. Secure in place through the outer casing into the flue collar using 3 metal screws provided. If the flue outlet collar is too thick for the Telescopic Length to fit over, you will need a Stove Adapter on top of the stove before installing the Telescopic Length. See Stove Adapters on page 6.

2. Make sure the Pipe Adapter/Flue extension is installed to the through the wall horizontal insulated chimney length.

3. Install the 90° Elbow (E90) to the top of the Telescopic Length and secure in place with 3 metal screws. If the clearances of the

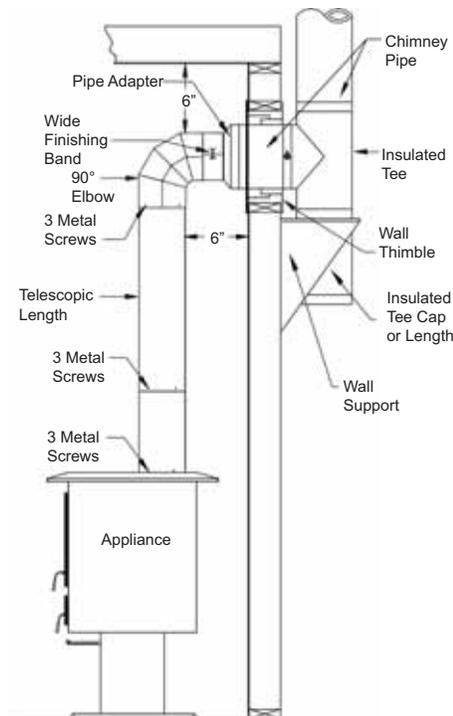


Figure D - Through the Wall To Factory Built Chimney

appliance requires a greater horizontal distance than provided by the 90° elbow, install the required connector length to the elbow first. Extend the Telescopic Length assembly and fit over the Pipe Adapter/Flue Extension. Secure in place with 3 metal screws provided. Secure the bottom and top of the Telescopic Length together once you have reach the necessary length. If the installation requires more length than provided by the Telescopic Length then add fixed length(s) on the appliance and the Telescopic Length next to the 90° Elbow. All joints are to be fastened together with the 3 metal screws provided with each length. Install the Wide Finishing Band (see pages 5-6). See images under Parts List, page 12.

#### **USP IN-LINE DAMPER (DK)**

Modern stoves today do not need a damper as the draft and combustion is controlled efficiently with the stove. Check with the manufacturer of the stove to see if a damper key (USP In-Line Damper) can be installed.

A damper allows control of the air being drawn through the chimney and to control the stove's combustion.

A damper must be installed in a vertical run, 2 to 3 feet above the stove.

When the handle of the damper is in the horizontal position (Figure 4), the damper is closed (reducing combustion). The "closed" position is still 20% open so the venting system is not completely blocked.

When the handle is in the vertical position, the damper is wide open (no reduction of combustion).



Figure 4 - In-Line Damper - Closed Position

#### **USP INCREASER (IN) AND REDUCER (RE)**

The use of the Increaser (IN) is to increase the diameter of a system to accommodate a range of flue sizes, appliances and installations. See image, page 12.

The use of a Reducer (RE) is to reduce the connector diameter. Use of this part must be approved by the appliance manufacturer or authority having jurisdiction. Check prior to installing in the system. See image, page 12.

#### **PROBE THERMOMETER (by others)**

To assist in monitoring your system, it is permissible to install a probe type flue gas thermometer in the USP Connector Pipe as it is designed for use on double wall stove pipe. Follow the installation instructions provided by the probe thermometer manufacturer for proper installation.

## **RULE FOR SAFE OPERATION AND MAINTENANCE**

Do not use fuel materials corrosive to the chimney such as driftwood, chemically treated wood or garbage or over fire your solid fuel appliance. This can cause failure of the USP Double Wall Stove Pipe and void any warranties.

When wood is burned slowly, it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue of a slow-burning fire. As a result, creosote residue accumulates on the flue lining. When ignited, this creosote makes an extremely hot fire.

Some coals contain large amount of sulphur (up to 7%). Combined with moisture, deposits forms a highly corrosive acid (sulphuric acid). Burn only low sulphur coals (less than 1%).

With a new installation, the chimney should be inspected frequently (every 2 weeks if need be) to determine the rate of creosote formation. When familiar with the appliance and chimney characteristics, the chimney should be inspected at least once every 2 months during the heating season to determine if a creosote or soot build-up has occurred.

Never overfire your stove. If any part of the stove or connector pipe is glowing red, then you are overfiring. Immediately close the stove's dampers until the system is cool.

If you see deposits more than 2mm (1/16") thick, clean all connector pipe and chimney system mechanically (with a properly sized plastic cleaning brush) to reduce the risk of a chimney fire.

Do not expect chemical chimney cleaners to keep your chimney clean. Their use does not negate the necessity of periodically inspecting and mechanically cleaning your chimney.

Every chimney flue and flue pipe shall be inspected annually and cleaned as often as may be necessary to keep the chimney and flue pipe free from dangerous accumulation of combustible deposits.

Contact a local professional chimney sweep for chimney cleaning services and advice.

Chimney and flue pipe are particularly susceptible to off-season condensation. The incomplete combustion of wood produces acids which, when combined with moisture, are corrosive.

During the heating season, corrosion tends not to occur because the heat in the system evaporates the condensation of any water vapour that may be formed.

Warm, moist air during the summer months passes slowly through the heating system. It makes any remaining ash or creosote moist and soggy. Corrosion of steel occurs where these deposits remain.

Off-season corrosion can be reduced considerably if the system is thoroughly cleaned after the last fire of the heating season.

Where coal is burned, the system must be thoroughly cleaned within 48 hours of shutting down the system for the season and all soot be removed from the chimney system. This should be the most important cleaning the system receives all year. Air inlets should be closed and sealed if necessary to prevent the constant flow of air through the system.

## **CHIMNEY FIRES AND WHAT TO DO ABOUT THEM:**

Your chimney or connector pipe are not intended or designed for use as a combustion or fire chamber. It is very easy to overfire your woodburning appliance with kindling, scrap lumber, brush or any fast burning fuel. This can produce flames and high temperatures all the way up the chimney, and may cause appliance, chimney and connector pipe damages.

If you see your appliance or the flue pipe glowing red, you are risking chimney damage or a fire. The creosote may be burning inside the chimney. If you see flames coming out at the top, you are either overfiring or there is a chimney fire. If the fire in your appliance has gotten out of control, or if you suspect a chimney fire for any reason, follow these steps:

1. Immediately close all dampers and/or air entrance openings to your appliance. Block off fireplace openings.

2. Alert your family to the possible danger.

3. Inspect your appliance and chimney surroundings for possible fire. If in doubt, alert your Fire Department.

4. Do not continue to operate your appliance until it and your chimney have been thoroughly inspected. Overheating can cause metal parts to expand, buckle and crack. If you are not certain, have a certified wood technician or certified chimney sweep disassemble all parts so they can be inspected and replaced.

5. Do not use salt or water on the fire in your appliance. Salt is corrosive and water will cause a dangerous steam explosion. You might be able to control the fire by using ashes, sand or baking soda. Baking soda is an ingredient used for dry chemical fire extinguishers.

6. After a chimney fire, when it is safe to do so, check internal locations such as the attic and under the roof and keep watching for two or three hours. There may be delayed smoldering and subsequent ignition, even if the fire inside the chimney has been controlled.

## **PARTS CHECK LIST**

To complete a proper USP Double Wall Stove-pipe installation, the following parts may be required:

• Telescopic L (35-3/4"-68-1/2")	*USP-TL
• Adjustable Length (2" - 4")	*USP-AL6
• Adjustable Length (2" - 10")	*USP-AL12
• Adjustable Length (2" - 16")	*USP-AL18
• Adjustable Length (2" - 34")	*USP-AL36
• Wide Finishing Band	*USP-WFB
• 6" Pipe Length	*USP-L6
• 12" Pipe Length	*USP-L12
• 18" Pipe Length	*USP-L18
• 24" Pipe Length	*USP-L24
• 36" Pipe Length	*USP-L36
• 48" Pipe Length	*USP-L48
• 30° Elbow	*USP-E30
• 45° Elbow	*USP-E45
• 90° Elbow	*USP-E90
• Tee Section (Includes Cap)	*USP-T
• Increaser (5"-6")	5USP-IN6
• Increaser (6"-7")	6USP-IN7
• Increaser (7"-8")	7USP-IN8
• Reducer (8"-7")	8USP-RE7
• Reducer (8"-6")	8USP-RE6
• Reducer (7"-6")	7USP-RE6
• Masonry Adapter	*USP-MA
• In-Line Damper	*USP-DK
• 8" Oval to 8" Round Adapter	8USP-ORA
• 8" Oval to 6" Round Adapter	8USP-ORA6
• Low-Profile Stove Adapter	*USP-LPSA
• JOTUL 6" Stove Adapter	6USP-SAJOTUL

\* Denotes size of product:  
6" (152mm), 7" (178mm), 8" (203mm).

**KEEP YOUR CHIMNEY  
AND CONNECTOR  
CLEAN!**


**PARTS CHECK LIST**



**USP OFFSET CHARTS WITH RIGID LENGTH**

<b>30° Elbow - 2x E30 with 1x Length</b>			
Size	Pipe Length	Offset	
		X	Y
6	0"	2 1/4	8 5/8
	6"	4 5/8	12 5/8
	12"	7 1/2	17 7/8
	18"	10 1/2	23
	24"	13 1/2	28 1/4
	36"	19 1/2	38 5/8
7	0"	2 3/8	9 1/8
	6"	4 3/4	13 1/8
	12"	7 5/8	18 3/8
	18"	10 5/8	23 1/2
	24"	13 5/8	28 3/4
	36"	19 5/8	39 1/8
8	0"	2 5/8	9 5/8
	6"	5	13 5/8
	12"	7 7/8	18 7/8
	18"	10 7/8	24
	24"	13 7/8	29 1/4
	36"	19 7/8	39 5/8
48"	25 3/8	49 1/8	

<b>45° Elbow - 2x E45 with 1x Length</b>			
Size	Pipe Length	Offset	
		X	Y
6	0"	4	9 1/2
	6"	7 1/4	12 3/4
	12"	11 1/2	17
	18"	15 3/4	21 1/4
	24"	20	25 1/2
	36"	28 1/2	34
7	0"	4 1/4	10 1/4
	6"	7 1/2	13 1/2
	12"	11 3/4	17 3/4
	18"	16	22
	24"	20 1/4	26 1/4
	36"	28 3/4	34 3/4
8	0"	4 1/2	11
	6"	7 3/4	14 1/4
	12"	12	18 1/2
	18"	16 1/4	22 3/4
	24"	20 1/2	27
	36"	29	35 1/2
48"	36 3/4	43 1/4	

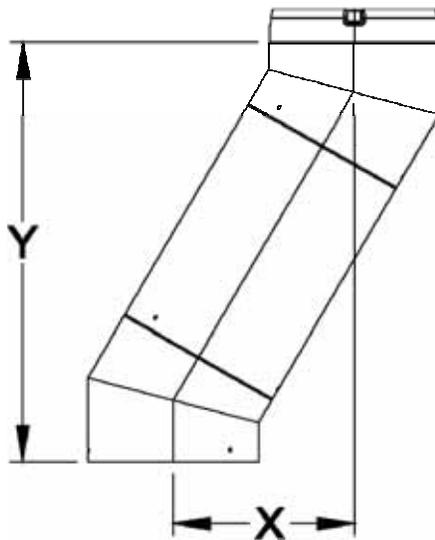

<b>90° Elbow - 2x E90 with 1x Length</b>			
Size	Pipe Length	Offset	
		X	Y
6	0"	10 3/8	10 3/8
	6"	15	
	12"	21	
	18"	27	
	24"	33	
	36"	45	
7	0"	11 3/8	11 3/8
	6"	16	
	12"	22	
	18"	28	
	24"	34	
	36"	46	
8	0"	12 3/8	12 3/8
	6"	17	
	12"	23	
	18"	29	
	24"	35	
	36"	47	
48"	58		

**USP OFFSET CHARTS WITH TELESCOPIC LENGTH**

**30° Elbow - 2x E30 with 1x Telescopic Length**


Size	Telescopic length		Offset		Rise	
			X		Y	
	Min	Max	MIN	MAX	MIN	MAX
6	35 3/4	68 1/8	20 1/8	36 1/4	39 5/8	67 5/8
7	35 3/4	68 1/8	20 1/4	36 3/8	40 1/8	68 1/8
8	35 3/4	68 1/8	20 1/2	36 5/8	40 5/8	68 5/8

**45° Elbow - 2x E45 with 1x Telescopic Length**

Size	Telescopic length		Offset		Rise	
			X		Y	
	Min	Max	MIN	MAX	MIN	MAX
6	35 3/4	68 1/8	29 1/4	52 1/8	34 3/4	57 5/8
7	35 3/4	68 1/8	29 1/2	52 3/8	35 1/2	58 3/8
8	35 3/4	68 1/8	29 3/4	52 5/8	36 1/4	59 1/8

**90° Elbow - 2x E90 with 1x Telescopic Length**

Size	Telescopic length		Offset		Rise	
			X		Y	
	Min	Max	MIN	MAX	MIN	MAX
6	35 3/4	68 1/8	46 1/8	78 1/2	10 3/8	
7	35 3/4	68 1/8	47 1/8	79 1/2	11 3/8	
8	35 3/4	68 1/8	48 1/8	80 1/2	12 3/8	

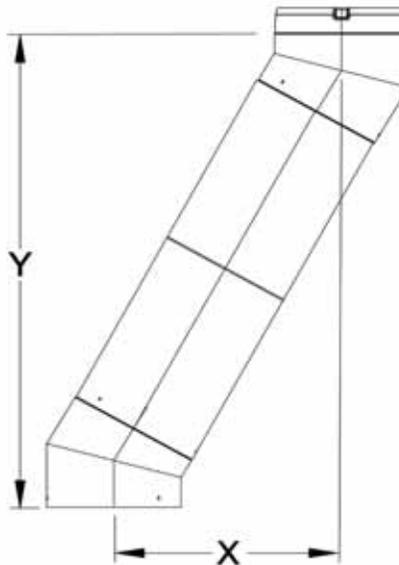

**“SMART CHOICE” LIMITED LIFETIME WARRANTY**

Selkirk Corporation, Amerivent (“Selkirk”, “Amerivent”, “we”, “us”, “our”) warrants our residential Chimney & Venting products (\* defined below) to be free from defects in material and workmanship. For products installed after January 1, 2023, for a period of Ten (10) years from original installation, we will provide replacement product with a similar or like quality of available Selkirk product, **free of charge**, excluding any installation costs. From the Eleventh (11) through Fifteenth (15) years, we will provide replacement product at a cost of 75% off the published Retail Price in effect on the date the claim is received, excluding any installation costs. At expiration of the Fifteen (15) year term, we will provide replacement product at a cost of 50% off the published Retail Price in effect on the date the claim is received excluding any installation costs. This warranty coverage is non-transferable and applies exclusively to the original consumer.

**PROFESSIONAL INSTALLATION:**

If installation is performed by Professional Installers certified in Canada by WETT or APC or in the USA by NFI or CSIA, we will provide replacement product with a similar or like quality of available product, free of charge (excluding any installation costs) for the full Fifteen (15) years from the date of original installation. To be eligible for this additional warranty the consumer must provide a proof of installation by a Professional Installer when submitting a claim.

**LIMITATIONS:**

BUYER’S REMEDIES ARE LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT AND DO NOT INCLUDE INSTALLATION COSTS. EXCEPT AS SET FORTH HEREIN, ALL OTHER WARRANTIES (EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. IT IS AGREED THAT THIS SHALL BE THE SOLE AND EXCLUSIVE REMEDY OF THE BUYER. IN NO EVENT SHALL WE BE LIABLE FOR ANY CONSEQUENTIAL, SPECIAL OR PUNITIVE DAMAGES ARISING DIRECTLY OR INDIRECTLY FROM THE USE OF THE PRODUCTS WHETHER BASED ON WARRANTY, CONTRACT NEGLIGENCE OR STRICT LIABILITY.

ALL LENGTHS, TEES, ELBOWS, AND COMPONENTS SUPPLIED BY US ARE SUBJECT TO WARRANTY COVERAGE. PRODUCT SUPPLIED BY US AS REPLACEMENT FOR ORIGINAL MATERIAL WILL BE SUBJECT TO A ONE-YEAR WARRANTY COVERAGE WITH THE EXCEPTION OF SAF-T PIPE WHICH IS SUBJECTED TO A 5 YEAR LIMITED WARRANTY COVERAGE FROM DEFECTS IN MATERIAL OR WORKMANSHIP WHEN PROPERLY INSTALLED PURSUANT TO THE MANUFACTURER’S INSTALLATION INSTRUCTIONS AND APPROPRIATE CODES.

**WARNING:** FAILURE TO INSTALL OR OPERATE PRODUCTS ACCORDING TO THE MANUFACTURER’S INSTRUCTIONS, OR FAILURE TO USE PRODUCTS WITH RESIDENTIAL APPLIANCES THAT HAVE BEEN CERTIFIED AT AN ACCREDITED LABORATORY WILL VOID ALL APPLICABLE WARRANTIES.

**THIS WARRANTY DOES NOT COVER:**

- (a) any non-stainless base tee unit mounted or connected to an Insulated Chimney system;
- (b) costs (labor or otherwise \*\*) associated with either removing a previously installed product, installing a replacement product, transportation or return of a product, or transportation of replacement product;
- (c) damage to the finish of products caused by the use of improper solvents/chemicals or improper (or lack of) cleaning methods;
- (d) damage resulting from normal wear and tear, corrosion from salt air or failure to reasonably clean, care for or maintain products in accordance with our installation instructions/recommendations;
- (e) damage (to products, appliances or structure) based on or resulting from improper installation or repair, misuse or abuse (including, but not limited to, excessive or improper operating condition), or alteration or adjustment other than in conformity with our installation instructions and specifications, whether performed by a contractor, service company, technician, or yourself;
- (f) any products that have been moved from their original installation site;
- (g) damage caused by burning driftwood, garbage, or any other prohibitive material that has been burned in the appliance served by the chimney;
- (h) damage that results from accidents such as riot, fire, flood, high winds, “acts of God”, or any other contingency beyond our control.

\*\* Due to the wide variance in installation practices and other conditions beyond our control, except as stated above, we do not guaranty or in any way warrant the installation of Chimney and Venting products.

**CLAIM PROCEDURE:** If you believe that a product is defective, notify us in writing at:



SELKIRK CANADA  
P.O. Box 526, Depot 1,  
Hamilton, Ontario, CANADA, L8L 7X6  
ATTN: WARRANTY CLAIMS  
1.888.735.5475  
www.selkirkcorp.ca



SELKIRK CORPORATION  
4460 44th Street S.E., Suite F  
Grand Rapids, MI 49512  
ATTN: WARRANTY CLAIMS  
1.800.433.6341  
www.selkirkcorp.com



AMERIVENT  
4460 44th Street S.E., Suite F  
Grand Rapids, MI 49512  
ATTN: WARRANTY CLAIMS  
1.800.423.4270  
www.ameri-vent.com

Notification should include a description of the product, model and serial number (if applicable) and a description of the product defect. Upon receipt of a written claim under this limited warranty and evidence of the date of purchase or installation, at our option and in our sole discretion, we will provide replacement product with similar or like quality of available product excluding any installation costs. We reserve the right to inspect or investigate any warranty claims prior to determining whether to provide replacement product. If, as determined by us, that repair or replacement of the product is not commercially practicable or cannot be completed in a timely manner, we may refund the prorated purchase price paid for the product upon verification by providing a copy of your invoice or receipt of bill of sale.

\*Products covered under this warranty: AFCL, ALT, BV (SD, MD, LD), CF, DCC, DFS, DSP, DT, DV, DWC, DWS/SWC, E, FC (JSC), EFC, GT, GTL, HT, HS/HSS, OV, PL, PSV, QC, R, RF, RP, RV, SAF-T LINER, SAF-T PIPE, SC (JM), SFCL, SPR, SPV, ST, SSFL, SSRL, TLC, U1, UPP, USP, UT, UTL, VP, WV.

